

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
1 Series	E81/E82/E87/E88	Body	MRS/AB Airbag/ACSM					0	
1 Series	E81/E82/E87/E88	Body	AHM Trailer module	•				•	•
1 Series	E81/E82/E87/E88	Body	AMP Amplifier					•	•
1 Series	E81/E82/E87/E88	Body	CA Comfort access system	•	•	•	•	0	•
1 Series	E81/E82/E87/E88	Body	CAN communication analysis		•	0	0	0	0
1 Series	E81/E82/E87/E88	Body	CCC-A Applications	•	•	•	•	•	•
1 Series	E81/E82/E87/E88	Body	CCC-ANT Aerial tuner					•	•
1 Series	E81/E82/E87/E88	Body	CCC-ASK Audio system controller	•	•	•		•	•
1 Series	E81/E82/E87/E88	Body	CCC-BO User interface					•	•
1 Series	E81/E82/E87/E88	Body	CCC-GW Gateway	•	•	•		•	•
1 Series	E81/E82/E87/E88	Body	CDC CD Changer				0	•	•
1 Series	E81/E82/E87/E88	Body	CIC Car Information Computer	•		•		•	•
1 Series	E81/E82/E87/E88	Body	CIC-GW Gateway				0	•	
1 Series	E81/E82/E87/E88	Body	CID Central information display	•		•		•	•
1 Series	E81/E82/E87/E88	Body	CON Controller					•	
1 Series	E81/E82/E87/E88	Body	CVM/CVM2 Convertible top module	•		•		•	•
1 Series	E81/E82/E87/E88	Body	DWA anti-theft alarm system					•	
1 Series	E81/E82/E87/E88	Body	FRM footwell module	•	•	•	•	•	•
1 Series	E81/E82/E87/E88	Body	FRM2 footwell module 2	•				•	•
1 Series	E81/E82/E87/E88	Body	FZD Function centre, roof	•				•	•
1 Series	E81/E82/E87/E88	Body	IHKA Heater/automatic A/C control					•	
1 Series	E81/E82/E87/E88	Body	IHKR Heater and A/C control	•				•	•
1 Series	E81/E82/E87/E88	Body	IHR Integrated heater control					•	•
1 Series	E81/E82/E87/E88	Body	INSTR Instrument cluster	•				•	•
1 Series	E81/E82/E87/E88	Body	JBE Junction-box electronics					•	•
1 Series	E81/E82/E87/E88	Body	JBE2 Junction Box electronics	•				•	•
1 Series	E81/E82/E87/E88	Body	JNAV Navigation system, Japan	•				•	
1 Series	E81/E82/E87/E88	Body	M-ASK-BO User interface	•				•	•
1 Series	E81/E82/E87/E88	Body	M-ASK-GW Gateway	•				•	
1 Series	E81/E82/E87/E88	Body	M-ASK-NAV Navigation system	•	•	•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
1 Series	E81/E82/E87/E88	Body	MOST system analysis				0	0	0
1 Series	E81/E82/E87/E88	Body	PDC Park distance control	•		•		•	•
1 Series	E81/E82/E87/E88	Body	RAD Radio					•	•
1 Series	E81/E82/E87/E88	Body	RAD2-BO User interface	•				•	•
1 Series	E81/E82/E87/E88	Body	RAD2-GW Gateway					•	•
1 Series	E81/E82/E87/E88	Body	RLSS Rain/Light Solar Sensor	•		•		0	0
1 Series	E81/E82/E87/E88	Body	SDARS Satellite tuner					•	•
1 Series	E81/E82/E87/E88	Body	SINE Siren and tilt sensor			•		0	0
1 Series	E81/E82/E87/E88	Body	SMBF Seat memory, front passenger						
1 Series	E81/E82/E87/E88	Body	SMFA Seat module, driver	•		•		•	•
1 Series	E81/E82/E87/E88	Body	TCU Telematic control unit					•	•
1 Series	E81/E82/E87/E88	Body	ULF Universal charging and hands-free facility	•		•		•	•
1 Series	E81/E82/E87/E88	Body	ULF-SBX Interface box					•	•
1 Series	E81/E82/E87/E88	Body	ULF-SBX-H Interface box High	•		•		•	•
1 Series	E81/E82/E87/E88	Chassis	ABS/ASC/DSC Dynamic Stability Control					•	•
1 Series	E81/E82/E87/E88	Chassis	AL active front steering(AFS70)	•		•		0	•
1 Series	E81/E82/E87/E88	Chassis	AL active steering	•				0	•
1 Series	E81/E82/E87/E88	Chassis	EPS Electronic Power Steering	•		•		•	•
1 Series	E81/E82/E87/E88	Chassis	RDC Tyre pressure control	•		•		•	•
1 Series	E81/E82/E87/E88	Drive	CAS Car Access System	•		•		•	•
1 Series	E81/E82/E87/E88	Drive	DME/DDE(Engine Electronics)					•	•
1 Series	E81/E82/E87/E88	Drive	EGS/AGS(Transmission Control)	•		•		•	•
1 Series	E81/E82/E87/E88	Drive	EKPS fuel-pump control					•	•
3 Series	E36[>9803]	Body	MRS/AB Airbag/ACSM	•		•		0	•
3 Series	E36[>9803]	Body	BCO/MID On-board computer/MID						
3 Series	E36[>9803]	Body	CVM/CVM2 Convertible top module			•		•	•
3 Series	E36[>9803]	Body	IHKA Heater/automatic A/C control					•	•
3 Series	E36[>9803]	Body	IR Radio/infrared locking system						
3 Series	E36[>9803]	Body	KOM Instrument cluster					•	0
3 Series	E36[>9803]	Body	PDC Park distance control			•		•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
3 Series	E36[>9803]	Body	URS Rollover sensor					0	0
3 Series	E36[>9803]	Body	ZKE Central body electronics		•	•	•	•	0
3 Series	E36[>9803]	Chassis	ABS/ASC/DSC Dynamic Stability Control					•	•
3 Series	E36[>9803]	Drive	DME/DDE(Engine Electronics)					•	•
3 Series	E36[>9803]	Drive	EGS/AGS(Transmission Control)					•	•
3 Series	E36[>9803]	Drive	EWS Vehicle immobilizer		•	•		•	0
3 Series	E36[>9803]	Drive	GR Cruise control					•	0
3 Series	E36[>9803]	Drive	TOENS Thermal oil-level sensor					•	0
3 Series	E46	Body	MRS/AB Airbag/ACSM					0	•
3 Series	E46	Body	AHL Adaptive directional headlights					•	•
3 Series	E46	Body	AIC Automatic Interval control					0	0
3 Series	E46	Body	BIT Basis Interface Telephone					0	0
3 Series	E46	Body	BM On-board monitor					•	0
3 Series	E46	Body	CVM/CVM2 Convertible top module					•	•
3 Series	E46	Body	IHKA Heater/automatic A/C control					•	•
3 Series	E46	Body	IHKR Heater and A/C control					•	•
3 Series	E46	Body	JBIT Japan Basis Interface Telephone		0	0		0	0
3 Series	E46	Body	KOM Instrument cluster		•	•	•	•	0
3 Series	E46	Body	LSZ Light switching centre					•	0
3 Series	E46	Body	MIR Multi-Information Radio					0	0
3 Series	E46	Body	NAJ Navigation computer, Japan					•	0
3 Series	E46	Body	NAR Navigation radio		•	•	0	•	0
3 Series	E46	Body	NAV Navigation computer					•	0
3 Series	E46	Body	NAV Navigation computer MKII					0	0
3 Series	E46	Body	PDC Park distance control					•	•
3 Series	E46	Body	RAD Radio		•	•		•	•
3 Series	E46	Body	RLS Rain/Light Sensor					0	•
3 Series	E46	Body	SES Language-input system				0	•	0
3 Series	E46	Body	SHD Sliding/tilting sunroof					•	•
3 Series	E46	Body	SMB Entrance aid, passenger						0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
3 Series	E46	Body	SMF Entrance aid, driver					•	0
3 Series	E46	Body	SMF Seat memory,driver					•	0
3 Series	E46	Body	SPMBT Mirror memory, passenger					•	0
3 Series	E46	Body	SPMFT Mirror memory, driver					•	0
3 Series	E46	Body	SZM Switching centre, centre console					•	•
3 Series	E46	Body	TCU Telematic control unit	•				•	•
3 Series	E46	Body	TEL Telephone interface	0	0	0		•	0
3 Series	E46	Body	ULF Universal charging and hands-free facility	•		•		•	•
3 Series	E46	Body	URS Rollover sensor					0	0
3 Series	E46	Body	VID Video module	•		•	0	0	0
3 Series	E46	Body	VID Video module III				0	0	0
3 Series	E46	Body	ZKE Central body electronics	•	•	•	•	•	0
3 Series	E46	Body	ZUH Auxiliary heater					•	0
3 Series	E46	Chassis	ABS/ASC/DSC Dynamic Stability Control		•	•	•	•	•
3 Series	E46	Chassis	DDS Deflation Detection System					0	0
3 Series	E46	Chassis	LWS Steering angle sensor	•	•	•	•	0	0
3 Series	E46	Chassis	MFL Multi-function steering wheel			•		0	0
3 Series	E46	Chassis	RDC Tyre pressure control		•	•	•	•	•
3 Series	E46	Drive	DME/DDE(Engine Electronics)					•	•
3 Series	E46	Drive	EGS/AGS(Transmission Control)		•	•	•	•	•
3 Series	E46	Drive	EKP Fuel pump			•		•	0
3 Series	E46	Drive	EWS Vehicle immobilizer	•	•	•	•	•	0
3 Series	E46	Drive	GR Cruise control			•		•	0
3 Series	E90/E91/E92/E93	Body	MRS/AB Airbag/ACSM	•		•	•	0	•
3 Series	E90/E91/E92/E93	Body	AHM Trailer module					•	•
3 Series	E90/E91/E92/E93	Body	AMP Amplifier		•	•	•	•	•
3 Series	E90/E91/E92/E93	Body	CA Comfort access system					0	•
3 Series	E90/E91/E92/E93	Body	CAN communication analysis	•	•	0	0	0	0
3 Series	E90/E91/E92/E93	Body	CCC-A Applications			•		•	•
3 Series	E90/E91/E92/E93	Body	CCC-ANT Aerial tuner		•	•	•	•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ec Inf			Live Data	Component activation	Physical HW
3 Series	E90/E91/E92/E93	Body	CCC-ASK Audio system controller					•	
3 Series	E90/E91/E92/E93	Body	CCC-BO User interface					•	•
3 Series	E90/E91/E92/E93	Body	CCC-GW Gateway					•	•
3 Series	E90/E91/E92/E93	Body	CDC CD Changer				0	•	•
3 Series	E90/E91/E92/E93	Body	CIC Car Information Computer					•	•
3 Series	E90/E91/E92/E93	Body	CIC-GW Gateway				0	•	•
3 Series	E90/E91/E92/E93	Body	CID Central information display					•	•
3 Series	E90/E91/E92/E93	Body	CNAV Navigation system, China					•	•
3 Series	E90/E91/E92/E93	Body	CON Controller					•	•
3 Series	E90/E91/E92/E93	Body	CTM Convertible-top module					•	•
3 Series	E90/E91/E92/E93	Body	DAB Digital tuner					•	•
3 Series	E90/E91/E92/E93	Body	DWA anti-theft alarm system		•		•	•	•
3 Series	E90/E91/E92/E93	Body	FLA High Beam Assist					•	•
3 Series	E90/E91/E92/E93	Body	FRM footwell module		•	•	•	•	•
3 Series	E90/E91/E92/E93	Body	FRM2 footwell module 2					•	•
3 Series	E90/E91/E92/E93	Body	FZD Function centre, roof				•	•	•
3 Series	E90/E91/E92/E93	Body	IBOC Digital tuner US					0	•
3 Series	E90/E91/E92/E93	Body	IHKA Heater/automatic A/C control		•	•	•	•	•
3 Series	E90/E91/E92/E93	Body	IHKR Heater and A/C control				•	•	•
3 Series	E90/E91/E92/E93	Body	IHR Integrated heater control		•	•	•	•	•
3 Series	E90/E91/E92/E93	Body	INSTR Instrument cluster				•	•	•
3 Series	E90/E91/E92/E93	Body	JBE Junction-box electronics			•	•	•	•
3 Series	E90/E91/E92/E93	Body	JBE2 Junction Box electronics					•	•
3 Series	E90/E91/E92/E93	Body	JNAV Navigation system, Japan				•	•	•
3 Series	E90/E91/E92/E93	Body	KNAV Navigation system,Korea					•	
3 Series	E90/E91/E92/E93	Body	M-ASK-BO User interface					•	•
3 Series	E90/E91/E92/E93	Body	M-ASK-GW Gateway					•	•
3 Series	E90/E91/E92/E93	Body	M-ASK-NAV Navigation system			•		•	0
3 Series	E90/E91/E92/E93	Body	MOST system analysis				0	0	0
3 Series	E90/E91/E92/E93	Body	PDC Park distance control			•	•	•	

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
3 Series	E90/E91/E92/E93	Body	RAD Radio	•		•		•	
3 Series	E90/E91/E92/E93	Body	RAD2-BO User interface	•		•		•	•
3 Series	E90/E91/E92/E93	Body	RAD2-GW Gateway					•	•
3 Series	E90/E91/E92/E93	Body	RLSS Rain/Light Solar Sensor	•				0	0
3 Series	E90/E91/E92/E93	Body	SDARS Satellite tuner					•	•
3 Series	E90/E91/E92/E93	Body	SHD Panorama glass sunroof						
3 Series	E90/E91/E92/E93	Body	SINE Siren and tilt sensor					0	0
3 Series	E90/E91/E92/E93	Body	SMBF Seat module, passenger	•				•	•
3 Series	E90/E91/E92/E93	Body	SMFA Seat module, driver					•	•
3 Series	E90/E91/E92/E93	Body	TCU Telematic control unit	•		•		•	•
3 Series	E90/E91/E92/E93	Body	ULF Universal charging and hands-free facility					•	•
3 Series	E90/E91/E92/E93	Body	ULF-SBX Interface box	•		•		•	•
3 Series	E90/E91/E92/E93	Body	ULF-SBX-H Interface box High					•	•
3 Series	E90/E91/E92/E93	Body	VM Video Module	•		•		•	•
3 Series	E90/E91/E92/E93	Chassis	ABS/ASC/DSC Dynamic Stability Control					•	•
3 Series	E90/E91/E92/E93	Chassis	ACC Active Cruise Control	•		•	0	0	•
3 Series	E90/E91/E92/E93	Chassis	AL active front steering(AFS70)	•				0	•
3 Series	E90/E91/E92/E93	Chassis	AL active steering	•		•		0	•
3 Series	E90/E91/E92/E93	Chassis	EDC Damper Control					•	•
3 Series	E90/E91/E92/E93	Chassis	EPS Electronic Power Steering	•				•	•
3 Series	E90/E91/E92/E93	Chassis	LDM Longitudinal Dynamics Management					0	•
3 Series	E90/E91/E92/E93	Chassis	RDC Tyre pressure control	•				•	•
3 Series	E90/E91/E92/E93	Drive	CAS Car Access System					•	•
3 Series	E90/E91/E92/E93	Drive	DME/DDE(Engine Electronics)	•				•	•
3 Series	E90/E91/E92/E93	Drive	DKG Twin-clutch gearbox					•	•
3 Series	E90/E91/E92/E93	Drive	EGS/AGS(Transmission Control)					•	•
3 Series	E90/E91/E92/E93	Drive	EKPS fuel-pump control					•	•
3 Series	E90/E91/E92/E93	Drive	GWS Gear selector switch		•			•	•
3 Series	E90/E91/E92/E93	Drive	VTG Transfer case					•	•
5 Series	E39	Body	MRS/AB Airbag/ACSM	•	•	•		0	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	E39	Body	AIC Automatic Interval control					0	0
5 Series	E39	Body	BIT Basis Interface Telephone	•				0	0
5 Series	E39	Body	BM On-board monitor					•	0
5 Series	E39	Body	DSP Digital Sound Processor	•	•	•		0	0
5 Series	E39	Body	GM base module		•			•	0
5 Series	E39	Body	GSR Cruise control	•	•	•		0	0
5 Series	E39	Body	HKM Boot-lid module				0	0	0
5 Series	E39	Body	IHKA Heater/automatic A/C control		•			•	•
5 Series	E39	Body	IHKR Heater and A/C control					•	
5 Series	E39	Body	IHR Integrated heater control	•	•			•	•
5 Series	E39	Body	IKE Instrument-cluster electronics				0	0	0
5 Series	E39	Body	IRIS Integrated Radio-Information System	•	0	0	0	0	0
5 Series	E39	Body	JBIT Japan Basis Interface Telephone		0	0		0	0
5 Series	E39	Body	KOM Instrument cluster	•	•			•	0
5 Series	E39	Body	LCM Light Check Module					•	0
5 Series	E39	Body	LCM Light Check Module IV	•				•	0
5 Series	E39	Body	LRA Automatic headlight vertical aim control					•	0
5 Series	E39	Body	MID Multi Information Display	•			0	0	0
5 Series	E39	Body	NAJ Navigation computer, Japan					•	0
5 Series	E39	Body	NAV Navigation computer	•				•	0
5 Series	E39	Body	PDC Park distance control					•	•
5 Series	E39	Body	RAD Radio	•	•	•		•	•
5 Series	E39	Body	RLS Rain/Light Sensor					0	•
5 Series	E39	Body	SES Language-input system		•		0	•	0
5 Series	E39	Body	SM/LSM Seat/steering-column memory	0	0	0		•	0
5 Series	E39	Body	STH park heating		•			•	0
5 Series	E39	Body	SZM Switching centre, centre console					•	•
5 Series	E39	Body	TCU Telematic control unit		•			•	•
5 Series	E39	Body	TEL Telephone interface	0	0	0		•	0
5 Series	E39	Body	ULF Universal charging and hands-free facility		•			•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	E39	Body	VID Video module				0	0	0
5 Series	E39	Body	ZKE Central body electronics	•		•	•	•	0
5 Series	E39	Chassis	ABS/ASC/DSC Dynamic Stability Control					•	•
5 Series	E39	Chassis	DDS Deflation Detection System		•			0	0
5 Series	E39	Chassis	EDC Damper Control		•			•	•
5 Series	E39	Chassis	EHC Electronic Ride-Height Control	•	•	•	•	•	●
5 Series	E39	Chassis	LEW Steering-angle sensor					0	0
5 Series	E39	Chassis	MFL Multi-function steering wheel		•		•	0	0
5 Series	E39	Chassis	RDC Tyre pressure control					•	•
5 Series	E39	Drive	DME/DDE(Engine Electronics)	•	•		•	•	•
5 Series	E39	Drive	EGS/AGS(Transmission Control)					•	•
5 Series	E39	Drive	EWS Vehicle immobilizer	•	•		•	•	0
5 Series	E39	Drive	GR Cruise control					•	0
5 Series	E60/E61	Body	MRS/AB Airbag/ACSM					0	•
5 Series	E60/E61	Body	AHL Adaptive directional headlights					•	•
5 Series	E60/E61	Body	AHM Trailer module	•				•	•
5 Series	E60/E61	Body	ALBBF active backrest width, front passenger					0	•
5 Series	E60/E61	Body	ALBFA active backrest width, driver	•		•		0	•
5 Series	E60/E61	Body	AMP Amplifier					•	•
5 Series	E60/E61	Body	CA Comfort access system		•			0	•
5 Series	E60/E61	Body	CAN communication analysis			0	0	0	0
5 Series	E60/E61	Body	CCC-A Applications		•			•	•
5 Series	E60/E61	Body	CCC-ANT Aerial tuner					•	•
5 Series	E60/E61	Body	CCC-ASK Audio system controller					•	•
5 Series	E60/E61	Body	CCC-BO User interface					•	•
5 Series	E60/E61	Body	CCC-GW Gateway					•	•
5 Series	E60/E61	Body	CDC CD Changer				0	•	
5 Series	E60/E61	Body	CHAMP-BO User interface	•				•	•
5 Series	E60/E61	Body	CHAMP-GW Gateway					•	•
5 Series	E60/E61	Body	CIC Car Information Computer		•			•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	E60/E61	Body	CIC-GW Gateway				0	•	•
5 Series	E60/E61	Body	CID Central information display			•	•	•	•
5 Series	E60/E61	Body	CNAV Navigation system,China					•	•
5 Series	E60/E61	Body	CON Controller					•	•
5 Series	E60/E61	Body	DAB Digital tuner					•	•
5 Series	E60/E61	Body	DVDC DVD Changer		•	•	0	•	•
5 Series	E60/E61	Body	DWA anti-theft alarm system					•	
5 Series	E60/E61	Body	FBI Flexible Bus Interface		•	•		0	•
5 Series	E60/E61	Body	FD Rear-compartment display					•	
5 Series	E60/E61	Body	FD2 Rear-compartment display 2			•		•	•
5 Series	E60/E61	Body	FLA High Beam Assist					•	•
5 Series	E60/E61	Body	HKL Rear-lid lift			•		•	•
5 Series	E60/E61	Body	HUD Head-Up Display					•	•
5 Series	E60/E61	Body	IHKA Heater/automatic A/C control			•		•	•
5 Series	E60/E61	Body	INSTR Instrument cluster					•	•
5 Series	E60/E61	Body	JNAV Navigation system, Japan			•		•	•
5 Series	E60/E61	Body	KBM Body basic module					•	•
5 Series	E60/E61	Body	KGM Body Gateway Module		•	•	•	•	•
5 Series	E60/E61	Body	KHI Headset interface			•		•	•
5 Series	E60/E61	Body	KNAV Navigation system,Korea		•	•	•	•	•
5 Series	E60/E61	Body	LM2 Light module 2					•	•
5 Series	E60/E61	Body	LM2 Light module 2 with adaptive headlight			•		•	•
5 Series	E60/E61	Body	LM2 AHL2 Light module 2 with adaptive headlight 2					•	•
5 Series	E60/E61	Body	M-ASK-BO User interface			•		•	•
5 Series	E60/E61	Body	M-ASK-GW Gateway					•	•
5 Series	E60/E61	Body	M-ASK-NAV Navigation system			•	•	•	0
5 Series	E60/E61	Body	MOST system analysis				0	0	0
5 Series	E60/E61	Body	MPM Micro-power module			•	•	•	•
5 Series	E60/E61	Body	NVE Night Vision Electronics					•	•
5 Series	E60/E61	Body	NVK Night Vision camera	•	•	•	•	•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	E60/E61	Body	PDC Park distance control					•	
5 Series	E60/E61	Body	RLS Rain/Light Sensor	•	•			0	•
5 Series	E60/E61	Body	RLSS Rain/Light Solar Sensor					0	0
5 Series	E60/E61	Body	RSE Rear Seat Entertainment	•	•	•	•	•	•
5 Series	E60/E61	Body	SBSL Satellite,B-pillar,left			•		0	•
5 Series	E60/E61	Body	SBSR Satellite, B-pillar, right		•	•		•	•
5 Series	E60/E61	Body	SDARS Satellite tuner					•	•
5 Series	E60/E61	Body	SFZ Satellite vehicle centre		•	•	•	0	•
5 Series	E60/E61	Body	SGM-SIM Safety and Gateway Module(SIM)					•	•
5 Series	E60/E61	Body	SGM-ZGM Safety and Gateway Module(ZGM)	•	•	•	0	0	•
5 Series	E60/E61	Body	SHD Slide/tilt sunroof 2						
5 Series	E60/E61	Body	SHD Sliding/tilting sunroof	•	•	•		•	•
5 Series	E60/E61	Body	SHZH Independent/auxiliary heater					•	•
5 Series	E60/E61	Body	SINE Siren and tilt sensor	•	•	•	•	0	0
5 Series	E60/E61	Body	SMBF Seat module, passenger					•	•
5 Series	E60/E61	Body	SMFA Seat module, driver	•		•	•	•	•
5 Series	E60/E61	Body	SVS Language processing system				0	•	•
5 Series	E60/E61	Body	SZL Steering column switch centre 2	•			•	•	•
5 Series	E60/E61	Body	SZL Switch centre, steering column					•	•
5 Series	E60/E61	Body	SZM Switching centre, centre console	•	•	•	•	●	•
5 Series	E60/E61	Body	TCU Telematic control unit					•	•
5 Series	E60/E61	Body	TLC Lane Departure Warning	•	•	•	•	•	0
5 Series	E60/E61	Body	TMBF Door module, front passenger			•		•	•
5 Series	E60/E61	Body	TMFA Door module, driver	•		•	•	0	•
5 Series	E60/E61	Body	ULF Universal charging and hands-free facility					•	•
5 Series	E60/E61	Body	ULF-SBX Interface box	•	•	•	•	•	•
5 Series	E60/E61	Body	ULF-SBX-H Interface box High					•	
5 Series	E60/E61	Body	VM Video Module					•	
5 Series	E60/E61	Chassis	ABS/ASC/DSC Dynamic Stability Control		•	•		•	
5 Series	E60/E61	Chassis	ACC Active Cruise Control		•	•	0	0	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	E60/E61	Chassis	ACC2 Active Cruise Control 2				0	0	•
5 Series	E60/E61	Chassis	AL active front steering(AFS70)	•			•	0	•
5 Series	E60/E61	Chassis	AL active steering					0	•
5 Series	E60/E61	Chassis	ARS Dynamic Drive 2	•			•	•	•
5 Series	E60/E61	Chassis	EDC Damper Control					•	•
5 Series	E60/E61	Chassis	EHC Electronic Ride-Height Control	•			•	•	•
5 Series	E60/E61	Chassis	LDM Longitudinal Dynamics Management					0	•
5 Series	E60/E61	Chassis	LRR Long-range sensor	•		•	0	0	•
5 Series	E60/E61	Chassis	RDC Tyre pressure control					•	•
5 Series	E60/E61	Drive	CAS Car Access System	•		•		•	•
5 Series	E60/E61	Drive	DME/DDE(Engine Electronics)					•	•
5 Series	E60/E61	Drive	EGS/AGS(Transmission Control)	•		•	•	•	•
5 Series	E60/E61	Drive	EKPS fuel-pump control					•	•
5 Series	E60/E61	Drive	GWS Gear selector switch	•		•	•	•	•
5 Series	E60/E61	Drive	VTC Valvetronic		0	0	0	0	•
5 Series	E60/E61	Drive	VTC2 Valvetronic 2	•	0	0	0	0	•
5 Series	E60/E61	Drive	VTG Transfer case	•				•	•
6 Series	E63/E64	Body	MRS/AB Airbag/ACSM	•		•	•	0	•
6 Series	E63/E64	Body	AHL Adaptive directional headlights	•				•	•
6 Series	E63/E64	Body	AMP Amplifier	•		•	•	•	•
6 Series	E63/E64	Body	CA Comfort access system	•				0	•
6 Series	E63/E64	Body	CAN communication analysis	•		0	0	0	0
6 Series	E63/E64	Body	CCC-A Applications					•	•
6 Series	E63/E64	Body	CCC-ANT Aerial tuner	•		•		•	•
6 Series	E63/E64	Body	CCC-ASK Audio system controller					•	•
6 Series	E63/E64	Body	CCC-BO User interface	•	•			•	•
6 Series	E63/E64	Body	CCC-GW Gateway	•				•	•
6 Series	E63/E64	Body	CDC CD Changer	•			0	•	•
6 Series	E63/E64	Body	CHAMP-BO User interface					•	•
6 Series	E63/E64	Body	CHAMP-GW Gateway		•			•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
6 Series	E63/E64	Body	CIC Car Information Computer					•	
6 Series	E63/E64	Body	CIC-GW Gateway		•	•	0	•	•
6 Series	E63/E64	Body	CID Central information display					•	
6 Series	E63/E64	Body	CNAV Navigation system, China					•	•
6 Series	E63/E64	Body	CON Controller					•	
6 Series	E63/E64	Body	CVM/CVM2 Convertible top module					•	•
6 Series	E63/E64	Body	DAB Digital tuner					•	
6 Series	E63/E64	Body	DVDC DVD Changer				0	•	•
6 Series	E63/E64	Body	DWA anti-theft alarm system					•	
6 Series	E63/E64	Body	FLA High Beam Assist					•	•
6 Series	E63/E64	Body	HUD Head-Up Display					•	•
6 Series	E63/E64	Body	IBOC Digital tuner US					0	•
6 Series	E63/E64	Body	IHKA Heater/automatic A/C control					•	•
6 Series	E63/E64	Body	INSTR Instrument cluster					•	•
6 Series	E63/E64	Body	JNAV Navigation system, Japan					•	•
6 Series	E63/E64	Body	KBM Body basic module			•		•	•
6 Series	E63/E64	Body	KGM Body Gateway Module					•	•
6 Series	E63/E64	Body	KNAV Navigation system,Korea		•	•	•	•	•
6 Series	E63/E64	Body	LM2 Light module 2		•			•	•
6 Series	E63/E64	Body	LM2 AHL light module 2 with adaptive headlight		•	•	•	•	•
6 Series	E63/E64	Body	LM2 AHL2 Light module 2 with adaptive headlight 2					•	•
6 Series	E63/E64	Body	M-ASK-BO User interface		•		•	•	•
6 Series	E63/E64	Body	M-ASK-GW Gateway		•			•	•
6 Series	E63/E64	Body	MOST system analysis		•	•	0	0	0
6 Series	E63/E64	Body	MPM Micro-power module					•	•
6 Series	E63/E64	Body	NVE Night Vision Electronics			•		•	•
6 Series	E63/E64	Body	NVK Night Vision camera					•	
6 Series	E63/E64	Body	PDC Park distance control		•			•	•
6 Series	E63/E64	Body	RLS Rain/Light Sensor					0	
6 Series	E63/E64	Body	RLSS Rain/Light Solar Sensor			•		0	0



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
6 Series	E63/E64	Body	SBSL Satellite,B-pillar,left					0	
6 Series	E63/E64	Body	SBSR Satellite,B-pillar,right					•	•
6 Series	E63/E64	Body	SDARS Satellite tuner					•	
6 Series	E63/E64	Body	SFZ Satellite vehicle centre		•			0	•
6 Series	E63/E64	Body	SGM-SIM Safety and Gateway Module(SIM)		•			•	•
6 Series	E63/E64	Body	SGM-ZGM Safety and Gateway Module(ZGM)		•	•	0	0	●
6 Series	E63/E64	Body	SHD Slide/tilt sunroof 2						
6 Series	E63/E64	Body	SHZH Independent/auxiliary heater		•	•		•	•
6 Series	E63/E64	Body	SMBF Seat memory, front passenger						
6 Series	E63/E64	Body	SMF Seat memory, driver		•	•		•	0
6 Series	E63/E64	Body	SVS Language processing system				0	•	•
6 Series	E63/E64	Body	SZL Steering column switch centre 2		•	•		•	•
6 Series	E63/E64	Body	SZL Switch centre, steering column					•	
6 Series	E63/E64	Body	SZM Switching centre, centre console		•	•		•	•
6 Series	E63/E64	Body	TCU Telematic control unit					•	
6 Series	E63/E64	Body	TLC Lane Departure Warning		•	•		•	0
6 Series	E63/E64	Body	TMBF Door module, front passenger					•	
6 Series	E63/E64	Body	TMFA Door module, driver					0	•
6 Series	E63/E64	Body	ULF Universal charging and hands-free facility					•	•
6 Series	E63/E64	Body	ULF-SBX Interface box					•	•
6 Series	E63/E64	Body	ULF-SBX-H Interface box High					•	
6 Series	E63/E64	Body	VM Video Module		•	•		•	•
6 Series	E63/E64	Chassis	ABS/ASC/DSC Dynamic Stability Control					•	\bullet
6 Series	E63/E64	Chassis	ACC2 Active Cruise Control 2		•		0	0	•
6 Series	E63/E64	Chassis	AL active front steering(AFS70)					0	
6 Series	E63/E64	Chassis	AL active steering					0	●
6 Series	E63/E64	Chassis	ARS Dynamic Drive					•	•
6 Series	E63/E64	Chassis	ARS Dynamic Drive 2					•	•
6 Series	E63/E64	Chassis	EDC Damper Control					•	•
6 Series	E63/E64	Chassis	LDM Longitudinal Dynamics Management		•	•		0	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
6 Series	E63/E64	Chassis	LRR Long-range sensor				0	0	•
6 Series	E63/E64	Chassis	RDC Tyre pressure control					•	•
6 Series	E63/E64	Drive	CAS Car Access System					•	•
6 Series	E63/E64	Drive	DME/DDE(Engine Electronics)	•	•	•	•	•	•
6 Series	E63/E64	Drive	EGS/AGS(Transmission Control)			•	•	•	•
6 Series	E63/E64	Drive	EKPS fuel-pump control		•	•	•	•	•
6 Series	E63/E64	Drive	GWS Gear selector switch					•	•
6 Series	E63/E64	Drive	VTC Valvetronic		0	0	0	0	•
6 Series	E63/E64	Drive	VTC2 Valvetronic 2		0	0	0	0	•
7 Series	E38	Body	MRS/AB Airbag/ACSM		•			0	•
7 Series	E38	Body	AIC Automatic Interval control					0	0
7 Series	E38	Body	BIT Basis Interface Telephone		•			0	0
7 Series	E38	Body	BM On-board monitor					•	0
7 Series	E38	Body	BMBT On-board monitor, control panel					0	0
7 Series	E38	Body	CCM Check Control Module				0	0	0
7 Series	E38	Body	DSP Digital Sound Processor					0	0
7 Series	E38	Body	FBZV Radio-control system				0	0	0
7 Series	E38	Body	FGB rear compartment blower			•	0	0	0
7 Series	E38	Body	FHK rear-compartment heating/air conditioning				0	0	0
7 Series	E38	Body	FID Rear-compartment information display		•		0	0	0
7 Series	E38	Body	FMBT Rear-compartment monitor, control panel						
7 Series	E38	Body	FMGT Rear-compartment monitor, graphics section						
7 Series	E38	Body	GR2 Cruise control					0	0
7 Series	E38	Body	HKM Boot-lid module				0	0	0
7 Series	E38	Body	IHKA Heater/automatic A/C control					•	
7 Series	E38	Body	IHKR Heater and A/C control					•	•
7 Series	E38	Body	IKE Instrument-cluster electronics				0	0	0
7 Series	E38	Body	IR Infrared compact locking system						
7 Series	E38	Body	IR Radio/infrared locking system						
7 Series	E38	Body	JBIT Japan Basis Interface Telephone	•	0	0		0	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	E38	Body	LCM Light Check Module					•	0
7 Series	E38	Body	LM Lights Module	•		•	•	•	•
7 Series	E38	Body	LRA Automatic headlight vertical aim control					•	0
7 Series	E38	Body	MID Multi Information Display			•	0	0	0
7 Series	E38	Body	NAJ Navigation computer, Japan			•	•	•	0
7 Series	E38	Body	NAV Navigation computer			•	•	•	0
7 Series	E38	Body	NAV Navigation computer MKIII			•	•	0	0
7 Series	E38	Body	PDC Park distance control			•	•	•	•
7 Series	E38	Body	RAD Radio					•	
7 Series	E38	Body	RCC Radio-clock module		0	0	•	0	0
7 Series	E38	Body	SES Language-input system				0	•	0
7 Series	E38	Body	SHD Sliding/tilting sunroof	•		•	•	•	•
7 Series	E38	Body	SM/LSM Seat/steering-column memory	0	0	0		•	0
7 Series	E38	Body	SMB passenger seat memory	•		•	•		0
7 Series	E38	Body	STH park heating					•	0
7 Series	E38	Body	SZM Switching centre, centre console	•		•	•	•	•
7 Series	E38	Body	TEL Telephone interface	0	0	0		•	0
7 Series	E38	Body	URS Rollover sensor	•		•	•	0	0
7 Series	E38	Body	VID Video module				0	0	0
7 Series	E38	Body	VID Video module III			•	0	0	0
7 Series	E38	Body	ZKE Central body electronics					•	0
7 Series	E38	Chassis	ABS/ASC/DSC Dynamic Stability Control			•	•	•	•
7 Series	E38	Chassis	EDC Damper Control					•	\bullet
7 Series	E38	Chassis	LEW Steering-angle sensor			•	•	0	0
7 Series	E38	Chassis	MFL Multi-function steering wheel					0	0
7 Series	E38	Chassis	RDC Tyre pressure control			•	•	•	•
7 Series	E38	Chassis	RDW tyre-blowout warning				•	0	0
7 Series	E38	Drive	DME/DDE(Engine Electronics)	•				•	•
7 Series	E38	Drive	EGS/AGS(Transmission Control)					•	
7 Series	E38	Drive	EML Electronic engine-power control		•	•	0	0	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	E38	Drive	EWS Vehicle immobilizer					•	0
7 Series	E38	Drive	TRS Electronic battery isolator switch			•	0	0	0
7 Series	E65	Body	AHL Adaptive directional headlights					•	
7 Series	E65	Body	AHM Trailer module	•	•	•		•	•
7 Series	E65	Body	AMP Amplifier	•	•	•		•	•
7 Series	E65	Body	ANT Aerial/antenna tuner	•	•	•		•	•
7 Series	E65	Body	ASK Audio system controller			•		•	•
7 Series	E65	Body	BZM Control centre, centre console	•	•	•		•	•
7 Series	E65	Body	CA Comfort access system			•		0	•
7 Series	E65	Body	CAN communication analysis	•	•	0	0	0	0
7 Series	E65	Body	CD Control Display				0	•	•
7 Series	E65	Body	CDC CD Changer	•		•	0	•	•
7 Series	E65	Body	CD-GW Control Display(Gateway)					•	•
7 Series	E65	Body	CEM Clean Energy Module	•		•		0	0
7 Series	E65	Body	CNAV Navigation system, China					•	•
7 Series	E65	Body	CON Controller	•		•		•	•
7 Series	E65	Body	DAB Digital tuner					•	•
7 Series	E65	Body	DVDC DVD Changer			•	0	•	•
7 Series	E65	Body	DWA anti-theft alarm system					•	•
7 Series	E65	Body	FBI Flexible Bus Interface			•		0	•
7 Series	E65	Body	FBZM Rear compartment, control centre, centre console					•	•
7 Series	E65	Body	FCON Rear compartment controller	•	•	•		•	•
7 Series	E65	Body	FD Rear-compartment display					•	•
7 Series	E65	Body	FKA Rear heater/air conditioning	•		•		•	•
7 Series	E65	Body	FLA High Beam Assist					•	•
7 Series	E65	Body	HKL Rear-lid lift					•	•
7 Series	E65	Body	IBOC Digital tuner US					0	
7 Series	E65	Body	IHKA Heater/automatic A/C control					•	•
7 Series	E65	Body	INSTR Instrument cluster					•	
7 Series	E65	Body	JBIT Japan Basis Interface Telephone		0	0		0	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	E65	Body	JNAV Navigation system, Japan					•	
7 Series	E65	Body	KHI Headset interface					•	•
7 Series	E65	Body	KNAV Navigation system,Korea					•	
7 Series	E65	Body	LM Lights Module					•	•
7 Series	E65	Body	LM2 Light module 2					•	•
7 Series	E65	Body	LM2 Light module 2 with adaptive headlight					•	•
7 Series	E65	Body	LM2 AHL2 Light module 2 with adaptive headlight 2					•	•
7 Series	E65	Body	MOST system analysis				0	0	0
7 Series	E65	Body	NAJ Navigation computer, Japan					•	0
7 Series	E65	Body	NAV Navigation computer					•	0
7 Series	E65	Body	NVE Night Vision Electronics					•	
7 Series	E65	Body	NVK Night Vision camera			•		•	•
7 Series	E65	Body	PDC Park distance control					•	•
7 Series	E65	Body	PM Power Module			•		•	•
7 Series	E65	Body	RLS Rain/Light Sensor					0	•
7 Series	E65	Body	SASL Satellite,A-pillar,left	•		•	•	0	•
7 Series	E65	Body	SASR Satellite, A-pillar, right					0	•
7 Series	E65	Body	SBSL Satellite,B-pillar,left	•		•	•	0	•
7 Series	E65	Body	SBSR Satellite,B-pillar,right			•		•	•
7 Series	E65	Body	SDARS Satellite tuner	•		•	•	•	•
7 Series	E65	Body	SEC2 Supplementary control unit 2					•	•
7 Series	E65	Body	SFZ Satellite vehicle centre					0	•
7 Series	E65	Body	SG-FD Control unit, rear-compartment display				0	•	
7 Series	E65	Body	SG-FD-GW Control unit, rear-compartment display(gateway)	•				•	•
7 Series	E65	Body	SGM-SIM Safety and Gateway Module(SIM)					•	•
7 Series	E65	Body	SGM-ZGM Safety and Gateway Module(ZGM)				0	0	•
7 Series	E65	Body	SHD Slide/tilt sunroof 2						
7 Series	E65	Body	SHD Sliding/tilting sunroof					•	
7 Series	E65	Body	SHZH Independent/auxiliary heater					•	
7 Series	E65	Body	SIM Safety and Information Module			•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	E65	Body	SINE Siren and tilt sensor					0	0
7 Series	E65	Body	SMBF Seat module, passenger	•				•	•
7 Series	E65	Body	SMBFH Seat module, passenger's side, rear					•	•
7 Series	E65	Body	SMFA Seat module, driver	•	•	•	•	●	•
7 Series	E65	Body	SMFAH Seat module, driver's side, rear			•		•	•
7 Series	E65	Body	SSBF Satellite, seat, passenger	•	•	•	•	0	●
7 Series	E65	Body	SSFA Satellite, seat, driver					0	•
7 Series	E65	Body	SSH Satellite, seat, rear			•	•	•	•
7 Series	E65	Body	STVL Satellite, door, front left					0	•
7 Series	E65	Body	STVR Satellite, door, front right			•	•	0	•
7 Series	E65	Body	SVS Language processing system				0	•	•
7 Series	E65	Body	SZL Switch centre, steering column	•	•			•	•
7 Series	E65	Body	TCU Telematic control unit					•	•
7 Series	E65	Body	TEL Telephone interface	0	0	0		•	0
7 Series	E65	Body	TEL Telephone(USA)				0	•	•
7 Series	E65	Body	TMBFH Door module,passenger's side, rear	•	•			0	•
7 Series	E65	Body	TMBFT Door module, passenger door					0	•
7 Series	E65	Body	TMFAH Door module,driver's side, rear	•				0	•
7 Series	E65	Body	TMFAT Door module, driver's door					0	•
7 Series	E65	Body	VM Video Module	•				•	•
7 Series	E65	Body	WIM Wiper module					•	•
7 Series	E65	Body	ZBM Two-battery management	•	•			•	•
7 Series	E65	Body	ZGM Central Gateway Module				0	0	•
7 Series	E65	Chassis	ABS/ASC/DSC Dynamic Stability Control	•	•			•	•
7 Series	E65	Chassis	ACC Active Cruise Control				0	0	•
7 Series	E65	Chassis	ACC2 Active Cruise Control 2				0	0	•
7 Series	E65	Chassis	ARS Dynamic Drive					•	
7 Series	E65	Chassis	ARS Dynamic Drive 2	•				•	•
7 Series	E65	Chassis	CIM Chassis Integration Module					•	
7 Series	E65	Chassis	CIM2 Chassis Integration Module 2	•			•	•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	E65	Chassis	EDC Damper Control					•	•
7 Series	E65	Chassis	EHC Electronic Ride-Height Control					•	•
7 Series	E65	Chassis	EMF Parking brake					•	•
7 Series	E65	Chassis	RDC Tyre pressure control	•				•	•
7 Series	E65	Drive	CAS Car Access System					•	•
7 Series	E65	Drive	DME/DDE(Engine Electronics)					•	•
7 Series	E65	Drive	EGS/AGS(Transmission Control)					•	•
7 Series	E65	Drive	EKPS fuel-pump control					•	•
7 Series	E65	Drive	HPFI control unit						
7 Series	E65	Drive	VTC Valvetronic		0	0	0	0	•
7 Series	E65	Drive	VTC2 Valvetronic 2		0	0	0	0	•
X3 Series	E83	Body	MRS/AB Airbag/ACSM	•	•	•	•	0	•
X3 Series	E83	Body	AHL Adaptive directional headlights					•	•
X3 Series	E83	Body	CDC CD Changer	•	•	•	0	•	•
X3 Series	E83	Body	CID Central information display					•	•
X3 Series	E83	Body	DSP Digital Sound Processor			•		0	0
X3 Series	E83	Body	GM base module					•	0
X3 Series	E83	Body	IHKA Heater/automatic A/C control	•	•	•	•	•	•
X3 Series	E83	Body	IHKR Heater and A/C control		•			•	•
X3 Series	E83	Body	INSTR Instrument cluster	•	•	•	•	•	•
X3 Series	E83	Body	JBIT Japan Basis Interface Telephone		0	0		0	0
X3 Series	E83	Body	LM Lights Module	•	•	•	•	•	•
X3 Series	E83	Body	LSZ Light switch centre II					•	0
X3 Series	E83	Body	MIR Multi-Information Radio		•	•		0	0
X3 Series	E83	Body	NAJ Navigation computer, Japan					•	0
X3 Series	E83	Body	NAV Navigation computer		•	•		•	0
X3 Series	E83	Body	PDC Park distance control					•	
X3 Series	E83	Body	RAD Radio			•		•	
X3 Series	E83	Body	RLS Rain/Light Sensor					0	
X3 Series	E83	Body	SBBF Seat occupancy, passenger	•	•	•		0	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X3 Series	E83	Body	SES Language-input system			•	0	•	0
X3 Series	E83	Body	SHD Sliding/tilting sunroof	•	•	•	•	•	•
X3 Series	E83	Body	SMF Seat memory,driver					•	0
X3 Series	E83	Body	SZM Switching centre, centre console			•	•	•	•
X3 Series	E83	Body	TCU Telematic control unit					•	•
X3 Series	E83	Body	ULF Universal charging and hands-free facility		•	•	•	•	•
X3 Series	E83	Body	VID Video module				0	0	0
X3 Series	E83	Chassis	ABS/ASC/DSC Dynamic Stability Control			•	•	•	•
X3 Series	E83	Chassis	LWS Steering angle sensor					0	0
X3 Series	E83	Chassis	MFL Multi-function steering wheel			•	•	0	0
X3 Series	E83	Chassis	RDC Tyre pressure control					•	•
X3 Series	E83	Chassis	SVT Servotronic			•	•	0	0
X3 Series	E83	Drive	DME/DDE(Engine Electronics)					•	•
X3 Series	E83	Drive	EGS/AGS(Transmission Control)	•		•	•	•	•
X3 Series	E83	Drive	EKPS fuel-pump control					•	•
X3 Series	E83	Drive	EWS Vehicle immobilizer			•	•	•	0
X3 Series	E83	Drive	VTG Transfer case					•	
X5 Series	E53	Body	MRS/AB Airbag/ACSM	•	•	•	•	0	•
X5 Series	E53	Body	AHL Adaptive directional headlights			•	•	•	•
X5 Series	E53	Body	AIC Automatic Interval control	•		•	•	0	0
X5 Series	E53	Body	BIT Basis Interface Telephone					0	0
X5 Series	E53	Body	BM On-board monitor	•		•	•	•	0
X5 Series	E53	Body	DSP Digital Sound Processor					0	0
X5 Series	E53	Body	IHKA Heater/automatic A/C control	•		•	•	•	•
X5 Series	E53	Body	IHKR Heater and A/C control					•	•
X5 Series	E53	Body	IKE Instrument-cluster electronics			•	0	0	0
X5 Series	E53	Body	JBIT Japan Basis Interface Telephone		0	0		0	0
X5 Series	E53	Body	KOM Instrument cluster					•	0
X5 Series	E53	Body	LCM Light Check Module					•	0
X5 Series	E53	Body	LCM Light Check Module IV		•	•	•	•	0



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X5 Series	E53	Body	LRA Automatic headlight vertical aim control					•	0
X5 Series	E53	Body	MID Multi Information Display	•	•		0	0	0
X5 Series	E53	Body	NAJ Navigation computer, Japan					•	0
X5 Series	E53	Body	NAV Navigation computer	•	•			•	0
X5 Series	E53	Body	NAV Navigation computer MKII					0	0
X5 Series	E53	Body	PDC Park distance control	•	•			•	•
X5 Series	E53	Body	PDC2 Park Distance Control 2					•	0
X5 Series	E53	Body	RAD Radio	•				•	•
X5 Series	E53	Body	RLS Rain/Light Sensor	•				0	•
X5 Series	E53	Body	SBBF Seat occupancy,passenger	•		•		0	0
X5 Series	E53	Body	SES Language-input system	•			0	•	0
X5 Series	E53	Body	SHD Sliding/tilting sunroof	•	•	•	•	•	•
X5 Series	E53	Body	SM/SLM Seat/steering-column memory	•				•	0
X5 Series	E53	Body	STH park heating	•	•	•	•	•	0
X5 Series	E53	Body	SZM Switching centre, centre console	•				•	•
X5 Series	E53	Body	TCU Telematic control unit	•	•	•	•	•	•
X5 Series	E53	Body	TEL Telephone interface	0	0	0		•	0
X5 Series	E53	Body	ULF Universal charging and hands-free facility	•	•	•	•	•	•
X5 Series	E53	Body	VID Video module	•			0	0	0
X5 Series	E53	Body	ZKE Central body electronics	•	•	•	•	•	0
X5 Series	E53	Chassis	ABS/ASC/DSC Dynamic Stability Control	•				•	•
X5 Series	E53	Chassis	EHC Electronic Ride-Height Control	•	•	•	•	•	•
X5 Series	E53	Chassis	EHC2 Electronic ride-level control						
X5 Series	E53	Chassis	LEW Steering-angle sensor	•	•	•	•	0	0
X5 Series	E53	Chassis	MFL Multi-function steering wheel	•				0	0
X5 Series	E53	Chassis	RDC Tyre pressure control	•	•	•	•	•	•
X5 Series	E53	Drive	DME/DDE(Engine Electronics)	•				•	•
X5 Series	E53	Drive	EGS/AGS(Transmission Control)	•	•	•	•	•	•
X5 Series	E53	Drive	EWS Vehicle immobilizer	•				•	0
X5 Series	E53	Drive	VTG Transfer case	•	•	•	•	•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info		Erase DTC	Live Data	Component activation	Physical HW
X5 Series	E70	Body	MRS/AB Airbag/ACSM	•		•		0	•
X5 Series	E70	Body	AHM Trailer module	•		•		•	•
X5 Series	E70	Body	AMPH Hi-Fi amplifier					•	
X5 Series	E70	Body	AMPT Top Hi-Fi amplifier					•	•
X5 Series	E70	Body	CA Comfort access system					0	•
X5 Series	E70	Body	CAN communication analysis		•	0	0	0	0
X5 Series	E70	Body	CCC-A Applications					•	
X5 Series	E70	Body	CCC-ANT Aerial tuner		•			•	•
X5 Series	E70	Body	CCC-ASK Audio system controller					•	
X5 Series	E70	Body	CCC-BO User interface					•	•
X5 Series	E70	Body	CCC-GW Gateway					•	
X5 Series	E70	Body	CDC CD Changer	•			0	•	•
X5 Series	E70	Body	CHAMP-BO User interface					•	•
X5 Series	E70	Body	CHAMP-GW Gateway	•		•		•	•
X5 Series	E70	Body	CID Central information display	•		•		•	•
X5 Series	E70	Body	CNAV Navigation system, China	•		•		•	•
X5 Series	E70	Body	CON Controller	•		•		•	•
X5 Series	E70	Body	DAB Digital tuner	•	•	•		•	•
X5 Series	E70	Body	DVDC DVD Changer	•		•	0	•	•
X5 Series	E70	Body	FD Rear-compartment display	•	•	•		•	•
X5 Series	E70	Body	FKA Rear heater/air conditioning	•		•		•	•
X5 Series	E70	Body	FLA High Beam Assist	•		•		•	•
X5 Series	E70	Body	FRM2 footwell module 2					•	
X5 Series	E70	Body	FZD Function centre, roof	•		•		•	•
X5 Series	E70	Body	HKL Rear-lid lift	•		•		•	•
X5 Series	E70	Body	HUD Head-Up Display	•	•	•		•	•
X5 Series	E70	Body	IBOC Digital tuner US					0	
X5 Series	E70	Body	IHKA Heater/automatic A/C control	•	•	•		•	•
X5 Series	E70	Body	INSTR Instrument cluster					•	
X5 Series	E70	Body	JBE2 Junction Box electronics			•		•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X5 Series	E70	Body	JNAV Navigation system, Japan					•	•
X5 Series	E70	Body	KHM Headphones module						
X5 Series	E70	Body	KNAV Navigation system,Korea					•	•
X5 Series	E70	Body	M-ASK-BO User interface		•		•	•	•
X5 Series	E70	Body	M-ASK-GW Gateway					•	•
X5 Series	E70	Body	MOST system analysis	•	•		0	0	0
X5 Series	E70	Body	PDC Park distance control					•	•
X5 Series	E70	Body	RFK Reversing camera	•	•	•		•	•
X5 Series	E70	Body	RLSS Rain/Light Solar Sensor					0	0
X5 Series	E70	Body	RSE Rear Seat Entertainment	•		•		•	•
X5 Series	E70	Body	SDARS Satellite tuner					•	•
X5 Series	E70	Body	SINE Siren and tilt sensor	•	•	•		0	0
X5 Series	E70	Body	SMBF Seat module,passenger					•	•
X5 Series	E70	Body	SMFA Seat module,driver	•	•	•		•	•
X5 Series	E70	Body	TCU Telematic control unit					•	•
X5 Series	E70	Body	ULF-SBX Interface box	•	•	•		•	•
X5 Series	E70	Body	ULF-SBX-H Interface box High	•				•	•
X5 Series	E70	Body	VM Video Module	•	•	•	•	•	•
X5 Series	E70	Body	VSW video switch					•	0
X5 Series	E70	Chassis	ABS/ASC/DSC Dynamic Stability Control	•	•	•	•	•	•
X5 Series	E70	Chassis	AL active front steering(AFS70)					0	•
X5 Series	E70	Chassis	ARS Dynamic Drive	•	•	•	•	•	•
X5 Series	E70	Chassis	EDCSHL Damper satellite, rear left					•	•
X5 Series	E70	Chassis	EDCSHR Damper satellite, rear right	•		•		•	•
X5 Series	E70	Chassis	EDCSVL Damper satellite, front left	•				•	•
X5 Series	E70	Chassis	EDCSVR Damper satellite, front right			•	•	•	•
X5 Series	E70	Chassis	EHC Electronic Ride-Height Control					•	•
X5 Series	E70	Chassis	EMF Parking brake	•	•	•	•	•	•
X5 Series	E70	Chassis	RDC Tyre pressure control	•				•	•
X5 Series	E70	Chassis	VDM Vertical Dynamics Management		•	•		•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X5 Series	E70	Drive	CAS Car Access System					•	
X5 Series	E70	Drive	DME/DDE(Engine Electronics)					•	•
X5 Series	E70	Drive	EGS/AGS(Transmission Control)					•	
X5 Series	E70	Drive	EKPS fuel-pump control	•	•			•	•
X5 Series	E70	Drive	GWS Gear selector switch					•	•
X5 Series	E70	Drive	VTC Valvetronic		0	0	0	0	•
X5 Series	E70	Drive	VTC2 Valvetronic 2		0	0	0	0	•
X5 Series	E70	Drive	VTG Transfer case					•	•
X6 Series	E71	Body	MRS/AB Airbag/ACSM					0	
X6 Series	E71	Body	AHM Trailer module					•	•
X6 Series	E71	Body	AMPH Hi-Fi amplifier					•	
X6 Series	E71	Body	AMPT Top Hi-Fi amplifier			•		•	•
X6 Series	E71	Body	CA Comfort access system					0	•
X6 Series	E71	Body	CAN communication analysis			0	0	0	0
X6 Series	E71	Body	CCC-A Applications					•	•
X6 Series	E71	Body	CCC-ANT Aerial tuner	•	•	•		•	•
X6 Series	E71	Body	CCC-ASK Audio system controller					•	•
X6 Series	E71	Body	CCC-BO User interface	•	•	•	•	•	•
X6 Series	E71	Body	CCC-GW Gateway	•	•			•	•
X6 Series	E71	Body	CDC CD Changer	•	•	•	0	•	•
X6 Series	E71	Body	CHAMP-BO User interface	•	•			•	•
X6 Series	E71	Body	CHAMP-GW Gateway	•	•	•	•	•	•
X6 Series	E71	Body	CID Central information display	•	•			•	•
X6 Series	E71	Body	CNAV Navigation system,China	•	•	•	•	•	•
X6 Series	E71	Body	CON Controller	•	•			•	•
X6 Series	E71	Body	DAB Digital tuner	•	•	•	•	•	•
X6 Series	E71	Body	DVDC DVD Changer	•	•		0	•	•
X6 Series	E71	Body	FD Rear-compartment display	•	•	•	•	•	•
X6 Series	E71	Body	FKA Rear heater/air conditioning	•				●	•
X6 Series	E71	Body	FLA High Beam Assist	•	•	•	•	•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X6 Series	E71	Body	FRM2 footwell module 2	•				•	
X6 Series	E71	Body	FZD Function centre, roof			•		•	•
X6 Series	E71	Body	HKL Rear-lid lift					•	•
X6 Series	E71	Body	HUD Head-Up Display	•		•	•	•	
X6 Series	E71	Body	IBOC Digital tuner US					0	
X6 Series	E71	Body	IHKA Heater/automatic A/C control	•				•	
X6 Series	E71	Body	INSTR Instrument cluster					•	•
X6 Series	E71	Body	JBE2 Junction Box electronics			•	•	•	•
X6 Series	E71	Body	JNAV Navigation system, Japan					•	•
X6 Series	E71	Body	KHM Headphones module						
X6 Series	E71	Body	KNAV Navigation system,Korea					•	•
X6 Series	E71	Body	M-ASK-BO User interface	•	•	•		•	
X6 Series	E71	Body	M-ASK-GW Gateway					•	
X6 Series	E71	Body	MOST system analysis	•	•	•	0	0	0
X6 Series	E71	Body	PDC Park distance control					•	•
X6 Series	E71	Body	RFK Reversing camera	•	•	•		•	•
X6 Series	E71	Body	RLSS Rain/Light Solar Sensor	•				0	0
X6 Series	E71	Body	RSE Rear Seat Entertainment	•	•	•	•	•	
X6 Series	E71	Body	SDARS Satellite tuner					•	
X6 Series	E71	Body	SINE Siren and tilt sensor	•	•	•	•	0	0
X6 Series	E71	Body	SMBF Seat module, passenger					•	
X6 Series	E71	Body	SMFA Seat module, driver	•	•	•	•	•	
X6 Series	E71	Body	TCU Telematic control unit					•	
X6 Series	E71	Body	ULF-SBX Interface box	•	•	•	•	•	
X6 Series	E71	Body	ULF-SBX-H Interface box High	•				•	
X6 Series	E71	Body	VM Video Module	•	•	•	•	•	•
X6 Series	E71	Body	VSW video switch	•	•	•		•	0
X6 Series	E71	Chassis	ABS/ASC/DSC Dynamic Stability Control		•	•	•	•	•
X6 Series	E71	Chassis	AL active steering	•		•		0	
X6 Series	E71	Chassis	ARS Dynamic Drive 2		•	•	•	•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X6 Series	E71	Chassis	EDCSHL Damper satellite, rear left					•	
X6 Series	E71	Chassis	EDCSHR Damper satellite, rear right	•		•		•	•
X6 Series	E71	Chassis	EDCSVL Damper satellite, front left					•	
X6 Series	E71	Chassis	EDCSVR Damper satellite, front right		•	•	•	•	•
X6 Series	E71	Chassis	EHC Electronic Ride-Height Control					•	•
X6 Series	E71	Chassis	EMF Parking brake		•	•	•	•	•
X6 Series	E71	Chassis	ICM Integrated Chassis Management					0	0
X6 Series	E71	Chassis	RDC Tyre pressure control	•		•	•	•	•
X6 Series	E71	Chassis	VDM Vertical Dynamics Management	•				•	•
X6 Series	E71	Drive	CAS Car Access System	•		•	•	•	•
X6 Series	E71	Drive	DME/DDE(Engine Electronics)	•				•	•
X6 Series	E71	Drive	EGS/AGS(Transmission Control)	•		•		•	•
X6 Series	E71	Drive	EKPS fuel-pump control	•				•	•
X6 Series	E71	Drive	GWS Gear selector switch	•	•	•		•	•
X6 Series	E71	Drive	QMVH Lateral-moment distribution, rear axle	•				•	•
X6 Series	E71	Drive	VTG Transfer case	•		•	•	•	•
Z3 Series	E36	Body	MRS/AB Airbag/ACSM	•				0	•
Z3 Series	E36	Body	IR Radio/infrared locking system						
Z3 Series	E36	Body	KOM Instrument cluster	•				•	0
Z3 Series	E36	Body	ZKE Central body electronics	•		•	•	•	0
Z3 Series	E36	Chassis	ABS/ASC/DSC Dynamic Stability Control	•		•		•	•
Z3 Series	E36	Chassis	LEW Steering-angle sensor	•		•	•	0	0
Z3 Series	E36	Drive	DME/DDE(Engine Electronics)	•		•		•	•
Z3 Series	E36	Drive	EGS/AGS(Transmission Control)	•		•		•	•
Z3 Series	E36	Drive	EWS Vehicle immobilizer	•				•	0
Z3 Series	E36	Drive	GR Cruise control	•		•		•	0
Z3 Series	E36	Drive	TOENS Thermal oil-level sensor					•	0
Z4 Series	E85/E86	Body	MRS/AB Airbag/ACSM	•		•	•	0	•
Z4 Series	E85/E86	Body	CDC CD Changer				0	•	•
Z4 Series	E85/E86	Body	CID Central information display		•	•	•	•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
Z4 Series	E85/E86	Body	CVM/CVM2 Convertible top module					•	•
Z4 Series	E85/E86	Body	DSP Digital Sound Processor	•				0	0
Z4 Series	E85/E86	Body	GM5 General module 5					•	0
Z4 Series	E85/E86	Body	IHKA Heater/automatic A/C control	•	•	•		•	•
Z4 Series	E85/E86	Body	IHKS Integrated heating/air-conditioning control					•	•
Z4 Series	E85/E86	Body	INSTR Instrument cluster	•	•			•	•
Z4 Series	E85/E86	Body	LSZ Light switch centre II					•	0
Z4 Series	E85/E86	Body	MIR Multi-Information Radio	•	•			0	0
Z4 Series	E85/E86	Body	NAJ Navigation computer, Japan					•	0
Z4 Series	E85/E86	Body	NAV Navigation computer	•				•	0
Z4 Series	E85/E86	Body	PDC Park distance control					•	•
Z4 Series	E85/E86	Body	RAD Radio	•	•			•	•
Z4 Series	E85/E86	Body	RLS Rain/Light Sensor					0	•
Z4 Series	E85/E86	Body	SBBF Seat occupancy, passenger	•	•			0	0
Z4 Series	E85/E86	Body	SBSL Satellite,B-pillar,left					0	•
Z4 Series	E85/E86	Body	SBSR Satellite,B-pillar,right	•	•			•	•
Z4 Series	E85/E86	Body	SES Language-input system				0	•	0
Z4 Series	E85/E86	Body	SIM Safety and Information Module	•				•	0
Z4 Series	E85/E86	Body	SMF Seat memory, driver					•	0
Z4 Series	E85/E86	Body	STVL Satellite, door, front left	•				0	•
Z4 Series	E85/E86	Body	STVR Satellite, door, front right					0	•
Z4 Series	E85/E86	Body	SZM Switching centre, centre console	•	•			•	•
Z4 Series	E85/E86	Body	TCU Telematic control unit			•		•	•
Z4 Series	E85/E86	Body	ULF Universal charging and hands-free facility	•		•		•	•
Z4 Series	E85/E86	Body	VID Video module				0	0	0
Z4 Series	E85/E86	Chassis	ABS/ASC/DSC Dynamic Stability Control		•	•		•	•
Z4 Series	E85/E86	Chassis	EPS Electronic Power Steering					•	•
Z4 Series	E85/E86	Chassis	LWS Steering angle sensor		•			0	0
Z4 Series	E85/E86	Chassis	MFL Multi-function steering wheel					0	0
Z4 Series	E85/E86	Chassis	RDC Tyre pressure control		•	•	•	•	•



NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
Z4 Series	E85/E86	Drive	DME/DDE(Engine Electronics)					•	•
Z4 Series	E85/E86	Drive	EGS/AGS(Transmission Control)		•			•	•
Z4 Series	E85/E86	Drive	EKPS fuel-pump control					•	
Z4 Series	E85/E86	Drive	EWS Vehicle immobilizer	•		•		•	0
Z8 Series	E52	Body	MRS/AB Airbag/ACSM					0	•
Z8 Series	E52	Body	BIT Basis Interface Telephone	•				0	0
Z8 Series	E52	Body	CVM/CVM2 Convertible top module					•	•
Z8 Series	E52	Body	DSP Digital Sound Processor			•		0	0
Z8 Series	E52	Body	GM base module					•	0
Z8 Series	E52	Body	IHKS Integrated heating/air-conditioning control			•		•	•
Z8 Series	E52	Body	KOM Instrument cluster					•	0
Z8 Series	E52	Body	LCM Light Check Module			•	•	•	0
Z8 Series	E52	Body	LCM Light Check Module IV					•	0
Z8 Series	E52	Body	LRA Automatic headlight vertical aim control	•	•	•	•	•	0
Z8 Series	E52	Body	MIR Multi-Information Radio					0	0
Z8 Series	E52	Body	NAV Navigation computer MKII		•		•	0	0
Z8 Series	E52	Body	NAV Navigation computer MKIII					0	0
Z8 Series	E52	Body	RAD Radio	•	•	•	•	•	•
Z8 Series	E52	Body	TEL Telephone interface	0	0	0		•	0
Z8 Series	E52	Chassis	ABS/ASC/DSC Dynamic Stability Control	•	•	•	•	•	•
Z8 Series	E52	Chassis	DDS Deflation Detection System					0	0
Z8 Series	E52	Chassis	ELV Electronic steering-column locking	•	•	•	•	0	0
Z8 Series	E52	Chassis	LEW Steering-angle sensor					0	0
Z8 Series	E52	Drive	DME/DDE(Engine Electronics)			•	•	•	•
Z8 Series	E52	Drive	EGS/AGS(Transmission Control)					•	•
Z8 Series	E52	Drive	EWS Vehicle immobilizer	•		•		•	0
Z Reihe	Z4_E89	Drive	CAS Car Access System					•	•
Z Reihe	Z4_E89	Drive	DKG Twin-clutch gearbox		•	•		•	•
Z Reihe	Z4_E89	Drive	DME/DDE(Engine Electronics)					•	•
Z Reihe	Z4_E89	Drive	EGS/AGS(Transmission Control)			•		•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
Z Reihe	Z4_E89	Drive	EKPS Fuel-pump control					•	•
Z Reihe	Z4_E89	Drive	GWS Gear selector switch			•	•	•	•
Z Reihe	Z4_E89	Chassis	ABS/ASC/DSC Dynamic Stability Control					•	•
Z Reihe	Z4_E89	Chassis	EDC Damper Control		•	•		•	•
Z Reihe	Z4_E89	Chassis	EMF Parking brake		•	•		•	•
Z Reihe	Z4_E89	Chassis	EPS Electronic Power Steering	•	•	•		•	•
Z Reihe	Z4_E89	Chassis	RDC Tyre pressure control		•	•		•	•
Z Reihe	Z4_E89	Body	AMP Amplifier		•	•		•	•
Z Reihe	Z4_E89	Body	CA Comfort access system		•	•		0	•
Z Reihe	Z4_E89	Body	CAN communication analysis			0	0	0	0
Z Reihe	Z4_E89	Body	CDC CD Changer			•	0	•	•
Z Reihe	Z4_E89	Body	CIC Car Information Computer			•		•	•
Z Reihe	Z4_E89	Body	CIC-GW Gateway			•	0	•	•
Z Reihe	Z4_E89	Body	CID Central Information Display			•		•	•
Z Reihe	Z4_E89	Body	CNAV Navigation system, China			•		•	•
Z Reihe	Z4_E89	Body	CON Controller		•	•		•	•
Z Reihe	Z4_E89	Body	CTM Convertible-top module			•		•	•
Z Reihe	Z4_E89	Body	DAB Digital tuner			•	•	•	•
Z Reihe	Z4_E89	Body	DVDC DVD Changer				0	•	•
Z Reihe	Z4_E89	Body	DWA anti-theft alarm system			•	•	•	•
Z Reihe	Z4_E89	Body	FLA High Beam Assist					•	•
Z Reihe	Z4_E89	Body	FRM2 Footwell module 2	•	•	•	●	●	•
Z Reihe	Z4_E89	Body	FZD Function centre, roof		•	•		•	•
Z Reihe	Z4_E89	Body	IHKA Heater/automatic A/C control		•	•		•	•
Z Reihe	Z4_E89	Body	IHKR Heater and A/C control					•	•
Z Reihe	Z4_E89	Body	IHR Integrated heater control			•		•	•
Z Reihe	Z4_E89	Body	INSTR Instrument cluster					•	•
Z Reihe	Z4_E89	Body	JBE2 Junction Box electronics			•		•	
Z Reihe	Z4_E89	Body	JNAV Navigation system, Japan					•	•
Z Reihe	Z4_E89	Body	KNAV Navigation system,Korea			•	•	•	•

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
Z Reihe	Z4_E89	Body	M-ASK-BO User interface					•	•
Z Reihe	Z4_E89	Body	M-ASK-BO User interface	•	•			•	•
Z Reihe	Z4_E89	Body	MOST system analysis				0	0	0
Z Reihe	Z4_E89	Body	MRS/AB Airbag/ACSM		•	•		0	•
Z Reihe	Z4_E89	Body	PDC Park Distance Control					•	•
Z Reihe	Z4_E89	Body	RAD Radio	•	•			•	•
Z Reihe	Z4_E89	Body	RAD2-B0 User interface					•	•
Z Reihe	Z4_E89	Body	RAD2-GW Gateway					•	•
Z Reihe	Z4_E89	Body	RLSS Rain/light solar sensor					0	0
Z Reihe	Z4_E89	Body	SDARS Satellite tuner			•		•	•
Z Reihe	Z4_E89	Body	SINE Siren and tilt sensor					0	0
Z Reihe	Z4_E89	Body	SMFA Seat module,driver			•		•	•
Z Reihe	Z4_E89	Body	TCU Telematic Control Unit					•	•
Z Reihe	Z4_E89	Body	ULF Universal charging and hands-free facility			•		•	•
Z Reihe	Z4_E89	Body	ULF-SBX Interface box					•	•
Z Reihe	Z4_E89	Body	ULF-SBX-H Interface box High		•	•		•	•
Z Reihe	Z4_E89	Body	VM Video Module					•	•
1 Series	F20	Drive	DDE Diesel Electronics	•	•	•	•	•	0
1 Series	F20	Drive	DME Digital Motor Electronics			•		•	0
1 Series	F20	Drive	EGS transmission management			•		•	0
1 Series	F20	Drive	EKPS Fuel-pump control					•	0
1 Series	F20	Drive	GWS Gear selector switch	•	•			•	0
1 Series	F20	Chassis	DSC Dynamic Stability Control					•	0
1 Series	F20	Chassis	EPS Electronic Power Steering					•	0
1 Series	F20	Chassis	VDM Vertical Dynamics Management					•	0
1 Series	F20	Body	ACC Active Cruise Control					•	0
1 Series	F20	Body	ACSM Crash Safety Module					•	0
1 Series	F20	Body	AHM Trailer module		•			•	0
1 Series	F20	Body	AMPH Hi-Fi amplifier					•	0
1 Series	F20	Body	CBX-ECALL Combox emergency call					•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
1 Series	F20	Body	CBX-MEDIA Combox Multimedia	•	•	•		•	0
1 Series	F20	Body	CID Central information display		•			•	0
1 Series	F20	Body	CON Controller					•	0
1 Series	F20	Body	DVDC DVD Changer					•	0
1 Series	F20	Body	FCON Rear compartment controller					•	0
1 Series	F20	Body	FEM Front electronic module	•	•	•	•	●	0
1 Series	F20	Body	FLA High Beam Assist					•	0
1 Series	F20	Body	FZD Function centre, roof	•	•	•	•	•	0
1 Series	F20	Body	ICM Integrated Chassis Management		•			•	0
1 Series	F20	Body	IHKA Integrated automatic heating/air conditioning	•	•	•	•	•	0
1 Series	F20	Body	INSTR Instrument cluster					•	0
1 Series	F20	Body	KAFAS Camera-based driver-assistance systems			•	•	•	0
1 Series	F20	Body	PDC Park distance control					•	0
1 Series	F20	Body	PMA Parking assistant		•		•	•	0
1 Series	F20	Body	RAD Radio					•	0
1 Series	F20	Body	REM Rear electronic module		•	•	•	•	0
1 Series	F20	Body	SMBF Seat module, passenger					•	0
1 Series	F20	Body	SMBFH Seat module, passenger's side, rear		•	•	•	•	0
1 Series	F20	Body	SMFA Seat module,driver					•	0
1 Series	F20	Body	SMFAH Seat module, driver's side, rear	•	•		•	●	0
1 Series	F20	Body	SWW Lane change warning		•			•	0
1 Series	F20	Body	TRSVC allround-view camera	•	•	•	•	•	0
1 Series	F20	Body	ZGM Central Gateway Control Module		•			•	0
3 Series	F30	Drive	DDE Diesel Electronics	•	•	•	•	•	0
3 Series	F30	Drive	DME Digital Motor Electronics		•			•	0
3 Series	F30	Drive	EGS transmission management	•	•	•	•	•	0
3 Series	F30	Drive	EKPS Fuel-pump control	•	•	•		•	0
3 Series	F30	Drive	GWS Gear selector switch	•	•	•	•	•	0
3 Series	F30	Chassis	DSC Dynamic Stability Control		•			•	0
3 Series	F30	Chassis	EPS Electronic Power Steering	•		•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
3 Series	F30	Chassis	VDM Vertical Dynamics Management			•		•	0
3 Series	F30	Body	ACC Active Cruise Control			•	•	•	0
3 Series	F30	Body	ACSM Crash Safety Module					•	0
3 Series	F30	Body	AHM Trailer module			•		•	0
3 Series	F30	Body	AMPH Hi-Fi amplifier					•	0
3 Series	F30	Body	CBX-ECALL Combox emergency call					•	0
3 Series	F30	Body	CBX-MEDIA Combox Multimedia					•	0
3 Series	F30	Body	CID Central information display					•	0
3 Series	F30	Body	CON Controller					•	0
3 Series	F30	Body	DVDC DVD Changer					•	0
3 Series	F30	Body	EMALI Electric-motor reel, left					•	0
3 Series	F30	Body	EMARE Electric-motor reel, right					•	0
3 Series	F30	Body	EME Electric machine electronics					•	0
3 Series	F30	Body	FCON Rear compartment controller					•	0
3 Series	F30	Body	FEM Front electronic module					•	0
3 Series	F30	Body	FLA High Beam Assist					•	0
3 Series	F30	Body	FZD Function centre, roof					•	0
3 Series	F30	Body	ICM Integrated Chassis Management			•		•	0
3 Series	F30	Body	IHKA Integrated automatic heating/air conditioning					•	0
3 Series	F30	Body	INSTR Instrument cluster				•	•	0
3 Series	F30	Body	KAFAS Camera-based driver-assistance systems					•	0
3 Series	F30	Body	PDC Park distance control	•		•	•	•	0
3 Series	F30	Body	PMA Parking assistant			●		•	0
3 Series	F30	Body	RAD Radio				•	•	0
3 Series	F30	Body	RDC Tyre pressure control					•	0
3 Series	F30	Body	REM Rear electronic module				•	•	0
3 Series	F30	Body	SMBF Seat module, passenger					•	0
3 Series	F30	Body	SMBFH Seat module, passenger's side, rear				•	•	0
3 Series	F30	Body	SME Accumulator-management electronics					•	0
3 Series	F30	Body	SMFA Seat module, driver			•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
3 Series	F30	Body	SMFAH Seat module, driver's side, rear			•		•	0
3 Series	F30	Body	SWW Lane change warning	•	•	•	•	•	0
3 Series	F30	Body	TRSVC allround-view camera			•		•	0
3 Series	F30	Body	VM Video Module	•		•	•	•	0
3 Series	F30	Body	ZGM Central Gateway Control Module			•	•	•	0
5 Series	F07	Drive	CAS Car Access System			•	•	•	0
5 Series	F07	Drive	DDE Diesel Electronics			•	•	•	0
5 Series	F07	Drive	DME Digital Motor Electronics			•	•	•	0
5 Series	F07	Drive	EGS transmission management			•	•	•	0
5 Series	F07	Drive	EKPS Fuel-pump control			•	•	•	0
5 Series	F07	Drive	GWS Gear selector switch			•	•	•	0
5 Series	F07	Chassis	DSC Dynamic Stability Control			•	•	•	0
5 Series	F07	Chassis	EHC Electronic Ride-Height Control			•	•	•	0
5 Series	F07	Chassis	EMF Parking brake			•	•	•	0
5 Series	F07	Chassis	EPS Electronic Power Steering			•	•	•	0
5 Series	F07	Chassis	VDM Vertical Dynamics Management			•	•	•	0
5 Series	F07	Chassis	EDCSHL Damper satellite, rear left			•	•	•	0
5 Series	F07	Chassis	EDCSHR Damper satellite, rear right			•	•	•	0
5 Series	F07	Chassis	EDCSVL Damper satellite, front left			•	•	•	0
5 Series	F07	Chassis	EDCSVR Damper satellite, front right			•	•	•	0
5 Series	F07	Body	ACC Active Cruise Control			•	•	•	0
5 Series	F07	Body	ACSM Crash Safety Module			•	•	●	0
5 Series	F07	Body	AHM Trailer module			•		•	0
5 Series	F07	Body	AL active steering			•	•	•	0
5 Series	F07	Body	AMPT Top Hi-Fi amplifier			•	•	•	0
5 Series	F07	Body	CBX-ECALL Combox emergency call	•		•	•	•	0
5 Series	F07	Body	CID Central information display			•	•	•	0
5 Series	F07	Body	CON Controller			•	•	•	0
5 Series	F07	Body	DVDC DVD Changer			•	•	•	0
5 Series	F07	Body	EMALI Electric-motor reel, left		•	•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	F07	Body	EMARE Electric-motor reel, right					•	0
5 Series	F07	Body	FD Rear-compartment display					•	0
5 Series	F07	Body	FD2 Rear-compartment display 2					•	0
5 Series	F07	Body	FKA Rear heater/air conditioning	•	•	•		•	0
5 Series	F07	Body	FLA High Beam Assist	•	•			•	0
5 Series	F07	Body	FRM Footwell module	•	•		•	●	0
5 Series	F07	Body	FZD Function centre, roof					•	0
5 Series	F07	Body	HKL Rear-lid lift	•	•			●	0
5 Series	F07	Body	HSR Rear-axle slip-angle control					•	0
5 Series	F07	Body	HUD Head-Up Display	•	•		•	•	0
5 Series	F07	Body	ICM Integrated Chassis Management					•	0
5 Series	F07	Body	IHKA Integrated automatic heating/air conditioning	•	•			•	0
5 Series	F07	Body	JBE Junction-box electronics					•	0
5 Series	F07	Body	KAFAS Camera-based driver-assistance systems	•	•		•	•	0
5 Series	F07	Body	INSTR Instrument cluster		•			•	0
5 Series	F07	Body	NVE Night Vision Electronics		•			•	0
5 Series	F07	Body	PDC Park Distance Control		•			•	0
5 Series	F07	Body	RAD Radio		•	•		•	0
5 Series	F07	Body	RDC Tyre pressure control					•	0
5 Series	F07	Body	RSE Rear Seat Entertainment		•	•		•	0
5 Series	F07	Body	SMBF Seat module, passenger		•			•	0
5 Series	F07	Body	SMBFH Seat module, passenger's side, rear	•	•	•	•	●	0
5 Series	F07	Body	SMFA Seat module, driver	•	•			•	0
5 Series	F07	Body	SMFAH Seat module, driver's side, rear	•	•		•	•	0
5 Series	F07	Body	SVT Servotronic	•				•	0
5 Series	F07	Body	SWW Lane change warning	•	•			•	0
5 Series	F07	Body	SZL Switch centre, steering column				•	•	0
5 Series	F07	Body	TRSVC allround-view camera				•	•	0
5 Series	F07	Body	ULF-SBX Interface box	•	•			•	0
5 Series	F07	Body	ULF-SBX-H Interface box high		•			•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	F07	Body	VM Video Module			•	•	•	0
5 Series	F07	Body	VSW video switch			•		•	0
5 Series	F07	Body	VTG Transfer case					•	0
5 Series	F07	Body	ZGM Central Gateway Control Module		•	•	•	•	0
5 Series	F07	Body	SDARS Satellite tuner			•	•	•	0
5 Series	F10/F11	Drive	CAS Car Access System		•	•	•	•	0
5 Series	F10/F11	Drive	DDE Diesel Electronics			•	•	•	0
5 Series	F10/F11	Drive	DME Digital Motor Electronics			•	•	•	0
5 Series	F10/F11	Drive	DME Digital Motor Electronics 2			•	•	•	0
5 Series	F10/F11	Drive	EGS transmission management			•	•	•	0
5 Series	F10/F11	Drive	EKPS Fuel-pump control			•	•	•	0
5 Series	F10/F11	Drive	GWS Gear selector switch		•	•	•	•	0
5 Series	F10/F11	Chassis	AL active steering					•	0
5 Series	F10/F11	Chassis	DSC Dynamic Stability Control		•	•	•	•	0
5 Series	F10/F11	Chassis	EDCSHL Damper satellite, rear left					•	0
5 Series	F10/F11	Chassis	EDCSHR Damper satellite, rear right		•	•	•	•	0
5 Series	F10/F11	Chassis	EDCSVL Damper satellite, front left			•	•	•	0
5 Series	F10/F11	Chassis	EDCSVR Damper satellite, front right		•	•	•	•	0
5 Series	F10/F11	Chassis	EHC Electronic Ride-Height Control					•	0
5 Series	F10/F11	Chassis	EMF Parking brake		•	•	•	•	0
5 Series	F10/F11	Chassis	EPS Electronic Power Steering					•	0
5 Series	F10/F11	Chassis	ICM Integrated Chassis Management		•	•	•	•	0
5 Series	F10/F11	Chassis	VDM Vertical Dynamics Management					•	0
5 Series	F10/F11	Body	ACC Active Cruise Control		•	•	•	•	0
5 Series	F10/F11	Body	ACSM Crash Safety Module					•	0
5 Series	F10/F11	Body	AHM Trailer module		•	•	•	•	0
5 Series	F10/F11	Body	AMPT Top Hi-Fi amplifier			•	•	•	0
5 Series	F10/F11	Body	ASD Active Sound Design			•	•	•	0
5 Series	F10/F11	Body	CBX-ECALL Combox emergency call			•	•	•	0
5 Series	F10/F11	Body	CBX-MEDIA Combox Multimedia		•	•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	F10/F11	Body	CIC Car Information Computer					•	0
5 Series	F10/F11	Body	CID Central Information Display					•	0
5 Series	F10/F11	Body	CON Controller					•	0
5 Series	F10/F11	Body	DVDC DVD Changer			•	•	•	0
5 Series	F10/F11	Body	EMALI Electric-motor reel, left					•	0
5 Series	F10/F11	Body	EMARE Electric-motor reel, right	•	•		•	•	0
5 Series	F10/F11	Body	EME Electric machine electronics					•	0
5 Series	F10/F11	Body	FCON Rear compartment controller	•	•		•	•	0
5 Series	F10/F11	Body	FD Rear-compartment display					•	0
5 Series	F10/F11	Body	FD2 Rear-compartment display 2	•	•		•	•	0
5 Series	F10/F11	Body	FKA Rear heater/air conditioning		•			•	0
5 Series	F10/F11	Body	FLA High Beam Assist	•	•		•	•	0
5 Series	F10/F11	Body	FRM Footwell module					•	0
5 Series	F10/F11	Body	FZD Function centre, roof	•	•		•	•	0
5 Series	F10/F11	Body	GHAS Regulated differential lock					•	0
5 Series	F10/F11	Body	HKL Rear-lid lift	•	•	•	•	•	0
5 Series	F10/F11	Body	HKL Automatic luggage compartment lid actuation					•	0
5 Series	F10/F11	Body	HSR Rear-axle slip-angle control	•	•	•	•	●	0
5 Series	F10/F11	Body	HUD Head-Up Display					•	0
5 Series	F10/F11	Body	IHKA Integrated automatic heating/air conditioning	•	•	•	•	•	0
5 Series	F10/F11	Body	JBE Junction-box electronics	•	•	•	•	•	0
5 Series	F10/F11	Body	KAFAS Camera-based driver-assistance systems	•	•	•	•	•	0
5 Series	F10/F11	Body	INSTR Instrument cluster		•			•	0
5 Series	F10/F11	Body	NVE Night Vision Electronics	•	•		•	•	0
5 Series	F10/F11	Body	PDC Park Distance Control		•			•	0
5 Series	F10/F11	Body	PMA Parking assistant	•	•			•	0
5 Series	F10/F11	Body	RAD Radio		•	●		•	0
5 Series	F10/F11	Body	RDC Tyre pressure control	•	•	•	•	•	0
5 Series	F10/F11	Body	RSE Rear Seat Entertainment	•				•	0
5 Series	F10/F11	Body	SEC Supplementary control unit			•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	F10/F11	Body	SEC2 Supplementary control unit 2				•	•	0
5 Series	F10/F11	Body	SMBF Seat module,passenger			•	•	•	0
5 Series	F10/F11	Body	SMBFH Seat module, passenger's side, rear				•	•	0
5 Series	F10/F11	Body	SME Accumulator-management electronics			•	•	•	0
5 Series	F10/F11	Body	SMFA Seat module, driver			•	•	•	0
5 Series	F10/F11	Body	SMFAH Seat module, driver's side, rear			•	•	•	0
5 Series	F10/F11	Body	SVT Servotronic			•	•	•	0
5 Series	F10/F11	Body	SWW Lane change warning			•	•	•	0
5 Series	F10/F11	Body	SZL Switch centre, steering column			•	•	•	0
5 Series	F10/F11	Body	TRSVC allround-view camera			•	•	•	0
5 Series	F10/F11	Body	ULF-SBX Interface box				•	•	0
5 Series	F10/F11	Body	ULF-SBX-H Interface box high			•	•	•	0
5 Series	F10/F11	Body	VM Video Module				•	•	0
5 Series	F10/F11	Body	VSW video switch			•	•	•	0
5 Series	F10/F11	Body	VTG Transfer case				•	•	0
5 Series	F10/F11	Body	ZGM Central Gateway Control Module	•		•	•	•	0
5 Series	F10/F11	Body	SDARS Satellite tuner				•	•	0
5 Series	F18	Drive	CAS Car Access System	•		•	•	•	0
5 Series	F18	Drive	DME Digital Motor Electronics					•	0
5 Series	F18	Drive	EGS transmission management	•		•	•	•	0
5 Series	F18	Drive	EKPS Fuel-pump control				•	•	0
5 Series	F18	Drive	GWS Gear selector switch			•	•	•	0
5 Series	F18	Chassis	AL active steering			•	•	•	0
5 Series	F18	Chassis	DSC Dynamic Stability Control			•	•	•	0
5 Series	F18	Chassis	EDCSHL Damper satellite, rear left				•	•	0
5 Series	F18	Chassis	EDCSHR Damper satellite, rear right			•	•	•	0
5 Series	F18	Chassis	EDCSVL Damper satellite, front left				•	•	0
5 Series	F18	Chassis	EDCSVR Damper satellite, front right			•	•	•	0
5 Series	F18	Chassis	EHC Electronic Ride-Height Control				•	•	0
5 Series	F18	Chassis	EMF Parking brake	•		•		•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	F18	Chassis	EPS Electronic Power Steering					•	0
5 Series	F18	Chassis	ICM Integrated Chassis Management	•	•		•	•	0
5 Series	F18	Chassis	VDM Vertical Dynamics Management					•	0
5 Series	F18	Body	ACC Active Cruise Control			•		•	0
5 Series	F18	Body	ACSM Crash Safety Module					•	0
5 Series	F18	Body	AHM Trailer module	•		•	•	•	0
5 Series	F18	Body	AMPT Top Hi-Fi amplifier					•	0
5 Series	F18	Body	CBX-ECALL Combox emergency call			•		•	0
5 Series	F18	Body	CBX-MEDIA Combox Multimedia					•	0
5 Series	F18	Body	CID Central Information Display	•		•		•	0
5 Series	F18	Body	CON Controller					•	0
5 Series	F18	Body	DVDC DVD Changer			•		•	0
5 Series	F18	Body	EMALI Electric-motor reel, left					•	0
5 Series	F18	Body	EMARE Electric-motor reel, right	•		•		•	0
5 Series	F18	Body	FCON Rear compartment controller					•	0
5 Series	F18	Body	FD Rear-compartment display	•		•		•	0
5 Series	F18	Body	FD2 Rear-compartment display 2					•	0
5 Series	F18	Body	FKA Rear heater/air conditioning	•			•	•	0
5 Series	F18	Body	FLA High Beam Assist					•	0
5 Series	F18	Body	FRM Footwell module					•	0
5 Series	F18	Body	FZD Function centre, roof					•	0
5 Series	F18	Body	HKL Rear-lid lift	•	•	•	•	•	0
5 Series	F18	Body	HSR Rear-axle slip-angle control	•	•			•	0
5 Series	F18	Body	HUD Head-Up Display	•		•	•	•	0
5 Series	F18	Body	IHKA Integrated automatic heating/air conditioning	•				•	0
5 Series	F18	Body	JBE Junction-box electronics	•	•	•	•	•	0
5 Series	F18	Body	KAFAS Camera-based driver-assistance systems					•	0
5 Series	F18	Body	INSTR Instrument cluster	•				•	0
5 Series	F18	Body	NVE Night Vision Electronics					•	0
5 Series	F18	Body	PDC Park Distance Control		•			•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
5 Series	F18	Body	PMA Parking assistant			•		•	0
5 Series	F18	Body	RAD Radio			•	•	•	0
5 Series	F18	Body	RDC Tyre pressure control				•	•	0
5 Series	F18	Body	RSE Rear Seat Entertainment	•			•	•	0
5 Series	F18	Body	SMBF Seat module, passenger				•	•	0
5 Series	F18	Body	SMBFH Seat module, passenger's side, rear	•			•	•	0
5 Series	F18	Body	SMFA Seat module, driver				•	•	0
5 Series	F18	Body	SMFAH Seat module, driver's side, rear				•	•	0
5 Series	F18	Body	SWW Lane change warning				•	•	0
5 Series	F18	Body	SZL Switch centre, steering column				•	•	0
5 Series	F18	Body	TRSVC allround-view camera				•	•	0
5 Series	F18	Body	ULF-SBX Interface box				•	•	0
5 Series	F18	Body	ULF-SBX-H Interface box high				•	•	0
5 Series	F18	Body	VM Video Module			•	•	•	0
5 Series	F18	Body	VSW video switch				•	•	0
5 Series	F18	Body	VTG Transfer case	•		•	•	•	0
5 Series	F18	Body	ZGM Central Gateway Control Module				•	•	0
5 Series	F18	Body	SDARS Satellite tuner	•		•	•	•	0
6 Series	F12/F13	Drive	CAS Car Access System				•	•	0
6 Series	F12/F13	Drive	DDE Diesel Electronics				•	•	0
6 Series	F12/F13	Drive	DME Digital Motor Electronics				•	•	0
6 Series	F12/F13	Drive	EGS transmission management	•			•	•	0
6 Series	F12/F13	Drive	EKPS Fuel-pump control				•	•	0
6 Series	F12/F13	Drive	GWS Gear selector switch				•	•	0
6 Series	F12/F13	Chassis	AL active steering				•	•	0
6 Series	F12/F13	Chassis	DSC Dynamic Stability Control				•	•	0
6 Series	F12/F13	Chassis	EDCSHL Damper satellite, rear left				•	•	0
6 Series	F12/F13	Chassis	EDCSHR Damper satellite, rear right				•	•	0
6 Series	F12/F13	Chassis	EDCSVL Damper satellite, front left					•	0
6 Series	F12/F13	Chassis	EDCSVR Damper satellite, front right	•	•	•		•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
6 Series	F12/F13	Chassis	EMF Parking brake					•	0
6 Series	F12/F13	Chassis	EPS Electronic Power Steering					•	0
6 Series	F12/F13	Chassis	ICM Integrated Chassis Management					•	0
6 Series	F12/F13	Chassis	VDM Vertical Dynamics Management	•	•	•	•	●	0
6 Series	F12/F13	Body	ACC Active Cruise Control	•	•	•	•	•	0
6 Series	F12/F13	Body	ACSM Crash Safety Module	•	•	•		•	0
6 Series	F12/F13	Body	AHM Trailer module		•			•	0
6 Series	F12/F13	Body	AMPT Top Hi-Fi amplifier	•	•	•		●	0
6 Series	F12/F13	Body	ASD Active Sound Design		•			•	0
6 Series	F12/F13	Body	CBX-ECALL Combox emergency call	•	•	•		●	0
6 Series	F12/F13	Body	CBX-MEDIA Combox Multimedia					•	0
6 Series	F12/F13	Body	CID Central Information Display	•	•	•		●	0
6 Series	F12/F13	Body	CON Controller					•	0
6 Series	F12/F13	Body	CVM Convertible top module		•			•	0
6 Series	F12/F13	Body	DVDC DVD Changer		•			•	0
6 Series	F12/F13	Body	EMALI Electric-motor reel, left	•	•	•	•	•	0
6 Series	F12/F13	Body	EMARE Electric-motor reel, right					•	0
6 Series	F12/F13	Body	FD Rear-compartment display	•	•	•	•	●	0
6 Series	F12/F13	Body	FD2 Rear-compartment display 2		•		•	•	0
6 Series	F12/F13	Body	FKA Rear heater/air conditioning	•	•	•	•	•	0
6 Series	F12/F13	Body	FLA High Beam Assist		•	•	•	•	0
6 Series	F12/F13	Body	FRM Footwell module	•	•	•	•	•	0
6 Series	F12/F13	Body	FZD Function centre, roof		•			•	0
6 Series	F12/F13	Body	HSR Rear-axle slip-angle control	•	•	•		●	0
6 Series	F12/F13	Body	HUD Head-Up Display		•			•	0
6 Series	F12/F13	Body	IHKA Integrated automatic heating/air conditioning	•	•	•		●	0
6 Series	F12/F13	Body	JBE Junction-box electronics		•			•	0
6 Series	F12/F13	Body	KAFAS Camera-based driver-assistance systems				•	•	0
6 Series	F12/F13	Body	INSTR Instrument cluster				•	•	0
6 Series	F12/F13	Body	NVE Night Vision Electronics			•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
6 Series	F12/F13	Body	PDC Park Distance Control			•	•	•	0
6 Series	F12/F13	Body	PMA Parking assistant		•	•	•	•	0
6 Series	F12/F13	Body	RAD Radio			•	•	•	0
6 Series	F12/F13	Body	RDC Tyre pressure control	•		•	•	•	0
6 Series	F12/F13	Body	SINE Siren and tilt sensor			•	•	•	0
6 Series	F12/F13	Body	SMBF Seat module, passenger	•		•	•	•	0
6 Series	F12/F13	Body	SMBFH Seat module, passenger's side, rear	•		•	•	•	0
6 Series	F12/F13	Body	SMFA Seat module, driver	•		•	•	•	0
6 Series	F12/F13	Body	SMFAH Seat module, driver's side, rear	•		•	•	•	0
6 Series	F12/F13	Body	SVT Servotronic	•		•	•	•	0
6 Series	F12/F13	Body	SWW Lane change warning	•		•	•	•	0
6 Series	F12/F13	Body	SZL Switch centre, steering column	•		•	•	•	0
6 Series	F12/F13	Body	TRSVC allround-view camera	•		•	•	•	0
6 Series	F12/F13	Body	VM Video Module	•		•	•	•	0
6 Series	F12/F13	Body	VSW video switch	•		•	•	•	0
6 Series	F12/F13	Body	VTG Transfer case	•	•	•	•	•	0
6 Series	F12/F13	Body	ZGM Central Gateway Control Module	•		•	•	•	0
6 Series	F12/F13	Body	SDARS Satellite tuner	•	•	•	•	•	0
7 Series	F01/F02/F04	Drive	CAS Car Access System			•	•	•	0
7 Series	F01/F02/F04	Drive	DME Digital Motor Electronics	•		•	•	•	0
7 Series	F01/F02/F04	Drive	DDE Diesel Electronics			•	•	•	0
7 Series	F01/F02/F04	Drive	DME Digital Motor Electronics 2	•		•	•	•	0
7 Series	F01/F02/F04	Drive	EGS transmission management	•		•		•	0
7 Series	F01/F02/F04	Drive	GWS Gear selector switch	•		•	•	•	0
7 Series	F01/F02/F04	Drive	EKPS Fuel-pump control	•		•	•	•	0
7 Series	F01/F02/F04	Chassis	DSC Dynamic Stability Control			•	•	•	0
7 Series	F01/F02/F04	Chassis	ICM Integrated Chassis Management			•	•	•	0
7 Series	F01/F02/F04	Chassis	VDM Vertical Dynamics Management			•	•	•	0
7 Series	F01/F02/F04	Chassis	EDCSHL Damper satellite, rear left			•	•	•	0
7 Series	F01/F02/F04	Chassis	EDCSHR Damper satellite, rear right	•	•	•	•	•	0



MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	F01/F02/F04	Chassis	EDCSVL Damper satellite, front left					•	0
7 Series	F01/F02/F04	Chassis	EDCSVR Damper satellite, front right			•		•	0
7 Series	F01/F02/F04	Chassis	EMF Parking brake					•	0
7 Series	F01/F02/F04	Chassis	EHC Electronic Ride-Height Control					•	0
7 Series	F01/F02/F04	Chassis	AL active steering					•	0
7 Series	F01/F02/F04	Body	INSTR Instrument cluster		•	•		•	0
7 Series	F01/F02/F04	Body	IHKA Integrated automatic heating/air conditioning					•	0
7 Series	F01/F02/F04	Body	ACSM Crash Safety Module		•			0	0
7 Series	F01/F02/F04	Body	CIC Car Information Computer					•	0
7 Series	F01/F02/F04	Body	FZD Function centre, roof					•	0
7 Series	F01/F02/F04	Body	PDC Park Distance Control					•	0
7 Series	F01/F02/F04	Body	FRM Footwell module					•	0
7 Series	F01/F02/F04	Body	JBE Junction-box electronics					•	0
7 Series	F01/F02/F04	Body	ZGM Central Gateway Control Module					0	0
7 Series	F01/F02/F04	Body	SZL Switch centre, steering column					•	0
7 Series	F01/F02/F04	Body	CON Controller					•	0
7 Series	F01/F02/F04	Body	CID Central Information Display					•	0
7 Series	F01/F02/F04	Body	SMFA Seat module, driver		•			•	0
7 Series	F01/F02/F04	Body	SMBF Seat module, passenger					•	0
7 Series	F01/F02/F04	Body	AMPH Hi-Fi amplifier		•			•	0
7 Series	F01/F02/F04	Body	HUD Head-Up Display		•	●		•	0
7 Series	F01/F02/F04	Body	ULF-SBX-H Interface box high		•	•		•	•
7 Series	F01/F02/F04	Body	FLA High Beam Assist		•	●		•	0
7 Series	F01/F02/F04	Body	RSE Rear Seat Entertainment					•	0
7 Series	F01/F02/F04	Body	DVDC DVD Changer					•	0
7 Series	F01/F02/F04	Body	VSW video switch					•	0
7 Series	F01/F02/F04	Body	HKL Rear-lid lift					•	0
7 Series	F01/F02/F04	Body	FD Rear-compartment display		•			•	0
7 Series	F01/F02/F04	Body	FD2 Rear-compartment display 2					•	0
7 Series	F01/F02/F04	Body	ACC Active Cruise Control		•	•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
7 Series	F01/F02/F04	Body	AHM Trailer module					•	0
7 Series	F01/F02/F04	Body	CBX-ECALL Combox emergency call	•		•		•	0
7 Series	F01/F02/F04	Body	CBX-MEDIA Combox Multimedia					•	0
7 Series	F01/F02/F04	Body	EMALI Electric-motor reel, left			•	•	•	0
7 Series	F01/F02/F04	Body	EMARE Electric-motor reel, right			●		•	0
7 Series	F01/F02/F04	Body	EME Electric machine electronics			•	•	●	0
7 Series	F01/F02/F04	Body	FCON Rear compartment controller					•	0
7 Series	F01/F02/F04	Body	FKA Rear heater/air conditioning				•	•	0
7 Series	F01/F02/F04	Body	HKA Rear-cabin automatic A/C					•	0
7 Series	F01/F02/F04	Body	HSR Rear-axle slip-angle control					•	0
7 Series	F01/F02/F04	Body	KAFAS Camera-based driver-assistance systems					•	0
7 Series	F01/F02/F04	Body	NVE Night Vision Electronics	•				•	0
7 Series	F01/F02/F04	Body	RAD Radio					•	0
7 Series	F01/F02/F04	Body	RDC Tyre pressure control	•		•	•	•	0
7 Series	F01/F02/F04	Body	SDARS Satellite tuner					•	0
7 Series	F01/F02/F04	Body	SMBFH Seat module, passenger's side, rear	•	•			•	0
7 Series	F01/F02/F04	Body	SME Accumulator-management electronics					•	0
7 Series	F01/F02/F04	Body	SMFAH Seat module,driver's side,rear	•		•		•	0
7 Series	F01/F02/F04	Body	SVT Servotronic					•	0
7 Series	F01/F02/F04	Body	SWW Lane change warning					•	0
7 Series	F01/F02/F04	Body	TRSVC allround-view camera					•	0
7 Series	F01/F02/F04	Body	ULF-SBX Interface box	•		•	•	●	0
7 Series	F01/F02/F04	Body	VM Video Module			●	•	•	0
7 Series	F01/F02/F04	Body	VTG Transfer case				•	•	0
X3 Series	F25	Drive	CAS Car Access System					•	0
X3 Series	F25	Drive	DDE Diesel Electronics				•	•	0
X3 Series	F25	Drive	DME Digital Motor Electronics					•	0
X3 Series	F25	Drive	EGS transmission management	•	•			•	0
X3 Series	F25	Drive	EKPS Fuel-pump control					•	0
X3 Series	F25	Drive	GWS Gear selector switch		•	•	•	•	0



MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X3 Series	F25	Chassis	DSC Dynamic Stability Control					•	0
X3 Series	F25	Chassis	EMF Parking brake				•	•	0
X3 Series	F25	Chassis	EPS Electronic Power Steering					•	0
X3 Series	F25	Chassis	ICM Integrated Chassis Management				•	•	0
X3 Series	F25	Chassis	VDM Vertical Dynamics Management				•	•	0
X3 Series	F25	Body	ACC Active Cruise Control	•	•	•	•	•	0
X3 Series	F25	Body	ACSM Crash Safety Module					•	0
X3 Series	F25	Body	AHM Trailer module	•	•		•	•	0
X3 Series	F25	Body	AMPT Top Hi-Fi amplifier					•	0
X3 Series	F25	Body	CBX-ECALL Combox emergency call	•	•		•	•	0
X3 Series	F25	Body	CBX-MEDIA Combox Multimedia					•	0
X3 Series	F25	Body	CID Central Information Display		•		•	•	0
X3 Series	F25	Body	CON Controller					•	0
X3 Series	F25	Body	DVDC DVD Changer	•	•		•	•	0
X3 Series	F25	Body	FLA High Beam Assist				•	•	0
X3 Series	F25	Body	FRM Footwell module	•	•		•	•	0
X3 Series	F25	Body	FZD Function centre, roof				•	•	0
X3 Series	F25	Body	GHAS Regulated differential lock	•		•	•	•	0
X3 Series	F25	Body	HKL Rear-lid lift					•	0
X3 Series	F25	Body	HKL Automatic luggage compartment lid actuation				•	•	0
X3 Series	F25	Body	HUD Head-Up Display				•	•	0
X3 Series	F25	Body	IHKA Integrated automatic heating/air conditioning	•	•		•	•	0
X3 Series	F25	Body	JBE Junction-box electronics	•	•		●	•	0
X3 Series	F25	Body	KAFAS Camera-based driver-assistance systems	•	•		•	•	0
X3 Series	F25	Body	INSTR Instrument cluster	•			•	•	0
X3 Series	F25	Body	PDC Park Distance Control		•		•	•	0
X3 Series	F25	Body	RAD Radio	•				•	0
X3 Series	F25	Body	RDC Tyre pressure control	•	•		•	•	0
X3 Series	F25	Body	SMBF Seat module, passenger		•		•	•	0
X3 Series	F25	Body	SMBFH Seat module,passenger's side,rear	•	•	•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X3 Series	F25	Body	SMFA Seat module, driver				•	•	0
X3 Series	F25	Body	SMFAH Seat module, driver's side, rear	•		•	•	•	0
X3 Series	F25	Body	SWW Lane change warning				•	•	0
X3 Series	F25	Body	SZL Switch centre, steering column	•		•	•	•	0
X3 Series	F25	Body	TRSVC allround-view camera			•	•	•	0
X3 Series	F25	Body	VM Video Module	•		•	•	•	0
X3 Series	F25	Body	VTG Transfer case					•	0
X3 Series	F25	Body	ZGM Central Gateway Control Module			•	•	•	0
X6 Series	E72	Drive	CAS Car Access System			•	•	•	0
X6 Series	E72	Drive	DME Digital Motor Electronics	•		•	•	•	0
X6 Series	E72	Drive	EKPS Fuel-pump control			•	•	•	0
X6 Series	E72	Drive	EMPI Hybrid oil-pump activation	•		•	•	•	0
X6 Series	E72	Drive	GWS Gear selector switch			•	•	•	0
X6 Series	E72	Drive	TCM Hybrid-transmission control	•		•	•	•	0
X6 Series	E72	Drive	VTG Transfer case			•	•	•	0
X6 Series	E72	Chassis	DSC Dynamic Stability Control	•		•	•	•	0
X6 Series	E72	Chassis	DSM Hybrid parking lock				•	•	0
X6 Series	E72	Chassis	EHC Electronic Ride-Height Control	•		•	•	•	0
X6 Series	E72	Chassis	EMF Parking brake				•	•	0
X6 Series	E72	Chassis	EPS Electronic Power Steering	•		•	•	•	0
X6 Series	E72	Chassis	RDC Tyre pressure control				•	•	0
X6 Series	E72	Chassis	SBA Hybrid brake-actuation changeover	•		•	•	•	0
X6 Series	E72	Body	ACSM Crash Safety Module			•	•	•	0
X6 Series	E72	Body	AHM Trailer module			•	•	•	0
X6 Series	E72	Body	AMPT Top Hi-Fi amplifier			•	•	•	0
X6 Series	E72	Body	APM Hybrid DC/DC converter	•		•	•	•	0
X6 Series	E72	Body	BCM Battery check module				•	•	0
X6 Series	E72	Body	CA Comfort access system	•			•	•	0
X6 Series	E72	Body	CBX-ECALL Combox emergency call				•	•	0
X6 Series	E72	Body	CDC CD Changer			•	•	•	0

MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X6 Series	E72	Body	CCC-GW Gateway					•	0
X6 Series	E72	Body	CID Central Information Display					•	0
X6 Series	E72	Body	CON Controller					•	0
X6 Series	E72	Body	DVDC DVD Changer	•	•			•	0
X6 Series	E72	Body	EKK Electric A/C compressor					•	0
X6 Series	E72	Body	FD Rear-compartment display	•	•	•		•	0
X6 Series	E72	Body	FKA Rear heater/air conditioning					•	0
X6 Series	E72	Body	FLA High Beam Assist		•			•	0
X6 Series	E72	Body	FRM2 Footwell module 2					•	0
X6 Series	E72	Body	FZD Function centre, roof		•			•	0
X6 Series	E72	Body	HCP Hybrid master control unit					•	0
X6 Series	E72	Body	HIM Hybrid Interface Module					•	0
X6 Series	E72	Body	HKL Rear-lid lift					•	0
X6 Series	E72	Body	HUD Head-Up Display					•	0
X6 Series	E72	Body	IHKA Integrated automatic heating/air conditioning					•	0
X6 Series	E72	Body	JBE2 Junction Box electronics	•	•			•	0
X6 Series	E72	Body	INSTR Instrument cluster					•	0
X6 Series	E72	Body	M-ASK-BO User interface					•	0
X6 Series	E72	Body	MCPA Hybrid electric-motor control 1					•	0
X6 Series	E72	Body	MCPB Hybrid electric-motor control 2	•	•			•	0
X6 Series	E72	Body	PDC Park Distance Control					•	0
X6 Series	E72	Body	RLSS Rain/light solar sensor	•	•	•	•	•	0
X6 Series	E72	Body	RSE Rear Seat Entertainment	•	•			•	0
X6 Series	E72	Body	SINE Siren and tilt sensor	•	•			•	0
X6 Series	E72	Body	SMFA Seat module, driver					•	0
X6 Series	E72	Body	SMBF Seat module, passenger	•	•		•	•	0
X6 Series	E72	Body	TFE Hybrid pressure-tank electronics					•	0
X6 Series	E72	Body	TRSVC allround-view camera	•	•			•	0
X6 Series	E72	Body	ULF-SBX Interface box	•	•			•	0
X6 Series	E72	Body	ULF-SBX-H Interface box high	•	•			•	0



MaxiDas_BMW_V7.10 Function List

NOTES:

This function is supported.

 \blacktriangle This function is the new feature in this version.

O This function is not supported. X This function may be supported, which depends on the actual condition of the vehicle.

Series	Model Series	Part	Systems	Ecu Info.	Read DTC	Erase DTC	Live Data	Component activation	Physical HW
X6 Series	E72	Body	VM Video Module	•	•		•	•	0

NOTES:

This function is supported.O This function is not supported.

- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type				
Chassis	ABS/DSC final check		7_E38				
Drive	Activation, pre-supply pump	•	X5_E53				
Drive	Activation, EDK actuator, full-load stop		3_E36				
Body	Add tuner profiles	0	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 X5_E70 X6_E71				
Chassis	Adjust ACC sensor	0	1_E81/E82/E87/E88 3_E90/E91/E92/E93 6_E63/E64 7_E65				
Drive	Adjust injector	*	1_E81/E82/E87/E88 3_E90/E91/E92/E93 X6_E71				
Chassis	Adjust long-range sensor	0	6_E63/E64				
Chassis	Adjustment steering-angle sensor		Z4_E85/E86 X6_E71				
Drive	Adjustment, consumption indicator	•	5_E39				
Drive	Adjustment, idle speed	*	3_E46 5_E39 7_E38 X5_E53				
Chassis	Adjustment	•	7_E38				
Chassis	Adjustment, shock absorber	•	7_E65				
Chassis	Adjustment, steering-angle sensor	*	3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E53 X5_E70 X6_E71 Z4_E85/E86				
Chassis	Adjustment, DSC unit(4-cyl.)	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93				
Chassis	Adjustment, steering-angle sensor		1_E81/E82/E87/E88				
Drive	Air-mass flow sensor	*	1_E81/E82/E87/E88 3_E46 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E53 X5_E70 X6_E71 Z4_E85/E86				
Chassis	Assembly mode	•	7_E65				
Body	Assembly position	•	7_E65				
Drive	Assembly test, electric throttle valve		1_E81/E82/E87/E88				
Drive	Additive rate adjustment	•	5_E39				
Drive	Balance test		3_E46 3_E90/E91/E92/E93				
Drive	Battery registration		1_E81/E82/E87/E88				

NOTES	

• This function is supported. $\ensuremath{\mathsf{O}}$ This function is not supported.

- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Chassis	Bleed routine	•	1_E81/E82/E87/E88 6_E63/E64 X5_E53 X5_E70 X6_E71
Chassis	Bleeding procedure for special cases	•	5_E60/E61 6_E63/E64
Chassis	Bleeding, precharging pump circuit	•	7_E38
Chassis	Bleeding, DSC hydraulics	•	3_E46 3_E90/E91/E92/E93 5_E39 7_E38 7_E65 X5_E53 Z8_E52
Drive	Bleeding, fuel system	•	1_E81/E82/E87/E88 3_E46 3_E90/E91/E92/E93 5_E60/E61 7_E65 X_E53
Chassis	Bleeding/Ventilation	•	3_E46
Drive	Bleed vanos	•	5_E60/E61
Drive	Boost pressure controller test	•	X5_E53
Chassis	Calibration of DSC sensor	*	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 X5_E70 X6_E71
Chassis	Calibration of DSC unit	•	1_E81/E82/E87/E88
Drive	CAS reset	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 X5_E70 X6_E71 7_F01/F02/F04 5_F10/F11
Drive	CAS, DME/DDE alignment	•	5_E60/E61 7_E65
	CBS correction,vehicle data	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71 7_F01/F02/F04 5_F10/F11
	CBS functionality,engine oil,disturbed	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65
Chassis	Check, air supply system	*	7_E65 X5_E53 X5_E70 X6_E71
Chassis	Check, compressor relay	*	7_E65 X5_E53 X5_E70 X6_E71

NOTES:

• This function is supported.

- O This function is not supported.
- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Chassis	Check, lifting and lowering	•	X5_E70 X6_E71
Chassis	Check, raise/lower function	•	7_E65
Chassis	Check, ride-level sensors	*	5_E39 7_E65 X5_E53 X5_E70 X6_E71
Chassis	Check, solenoid valve	0	X5_E53
Chassis	Check, supply, pressure accumulator	0	X5_E53
Chassis	Check, valve, pressure accumulator	0	X5_E53
Chassis	CIM control unit		7_E65
Drive	Clear adaptation	•	1_E81/E82/E87/E88 3_E36 3_E46 3_E90/E91/E92/E93 5_E39 5_E60/E61 7_E65 X_E53
Drive	Clear mixture adaptation	•	3_E46 3_E90/E91/E92/E93 5_E39
Drive	Clutch adaptation		3_E90/E91/E92/E93
Drive	CO adjustment	•	1_E81/E82/E87/E88 3_E30 3_E36 3_E46 3_E90/E91/E92/E93 5_E39 5_E60/E61 7_E38 7_E65 Z_E36
Body	Coding data	•	7_E65 Z4_E85/E86
Chassis	Connection, brake lines	•	3_E36[>9803] 3_E46 Z3_E36
Chassis	Connection, speed sensor	*	3_E36[>9803] 3_E46 Z3_E36
Drive	Consumption calculation		1_E81/E82/E87/E88
Drive	Consumption indicator	•	3_E90/E91/E92/E93
Chassis	Control-unit replacement	•	3_E46 5_E39 7_E38 X5_E53 Z8_E52 5_E60 (D01
Body	Coolant compressor/initial start-up	*	5_E60/E61 6_E63/E64
Body	Create boot file again	0	1_E81/E82/E87/E88 3_E90/E91/E92/E935_E60/E61 6_E63/E64 X5_E70 X6_E71
Drive	Data adjustment, mechatronics	•	3_E90/E91/E92/E93
Drive	DDE-CAS	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 7_E65 X5_E70
Drive	DDE-EWSIII	•	3_E46 5_E60/E61
Drive	Defines engage Neutral		5_E60/E61

NOTES:

This function is supported.O This function is not supported.

- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

	a function is not supported.	* This function may be supported,		
Part	Components		MaxiDas	Body Type
Drive	Delete adaptations/variants			5_E60/E61 6_E63/E64
DIIVE	Defete adaptations/variants		•	7_E65
a 1				7_E65
Chassis	Delete energy saving mode		•	X5_E70 X6_E71
Chassis	Delete line mode		•	5_E39
01103515				X5_E53
				1_E81/E82/E87/E88 3_E46
				3_E90/E91/E92/E93
				5_E39
				5_E60/E61 6_E63/E64
Body	Delete transport mode		•	7_E65
				X3_E83
				X5_E53 X5_E70
				X5_E70 X6_E71
				Z4_E85/E86
				Z8_E52
Body	Delivery position		•	5_E60/E61 7_E65
				1_E81/E82/E87/E88
				3_E90/E91/E92/E93
Body	Disable/enable			5_E60/E61 6_E63/E64
БОЦУ			•	7_E65
				X5_E70
				X6_E71
				3_E36[>9803] 3_E46
				5_E39
				7_E38
Body	Disable/enable key		•	X3_E83
				X5_E53 Z3_E36
				Z4_E85/E86
				Z8_E52
				3_E36[>9803]
				3_E46 5_E39
				7_E38
Drive	Disable/enable key		•	X3_E83
				X5_E53 72_E26
				Z3_E36 Z4_E85/E86
				Z8_E52
р :				1_E81/E82/E87/E88
Drive	DME-CAS			3_E90/E91/E92/E93 7_E65
Chassis	DSC sensors check		●	5_E60/E61 6_E63/E64
Chassis	End stop		•	1_E81/E82/E87/E88
51100010			-	3_E90/E91/E92/E93 3_E46
Drive	Engage any gear		•	3_E46 5_E60/E61

NOTES:

This function is supported.O This function is not supported.

Autel

 \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Body	Evaluate battery charge state	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64
			X5_E70 X6_E71 1_E81/E82/E87/E88
Body	Evaluate closed-circuit current monitoring	•	3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 X5_E70 X6_E71
Drive	EWS Reset function	•	X5_E70 X6_E71
Drive	EWS/DDE alignment	•	3_E46 X_E53
Drive	EWS/DME adjustment	•	3_E36
Drive	EWS/DME alignment	•	3_E36 3_E46 5_E39 7_E38 Z3_E36
Drive	EWS-DME/DDE adjustment	•	3_E30
Chassis	Execute braking-in program	•	X5_E70 X6_E71
Drive	Exhaust-gas recirculation	•	5_E39
Drive	Exhaust-Gas circulation	•	1_E81/E82/E87/E88
Chassis	Fault lamp on sporadically	•	5_E39 X5_E53
Chassis	Fault, sensors, learn values	*	6_E63/E64 7_E65 X5_E70 X6_E71
Chassis	Final ABS checks	•	7_E38
Drive	Fuel injector matching	•	1_E81/E82/E87/E88
Body	Heating test run	•	5_E60/E61 6_E63/E64 7_E65
Chassis	Hydraulic mix up check		7_E38
Drive	Idle speed	•	1_E81/E82/E87/E88 3_E36 3_E46 3_E90/E91/E92/E93 5_E39 5_E60/E61 6_E63/E64 7_E38 7_E65 X3_E83 X5_E53 X5_E53 X5_E70 X6_E71 Z4_E85/E86 1_E81/E82/E87/E88
Body	Initial operation, A/C compressor	•	3_E90/E91/E92/E93 X5_E70 X6_E71
Chassis	Initial setting, switch-on state	•	7_E65
Body	Initialisation	•	5_E60/E61 6_E63/E64 7_E65

NOTES:

Autel

• This function is supported.

O This function is not supported.

 \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Body	Initialize power window	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Body	Initialize power-window drive	•	5_E60/E61
Body	Initialize rain sensor	•	3_E46 5_E39 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E53 Z4_E85/E86
Body	Initialize rain/light sensor	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93
Body	Initialize rain/light solar sensor	•	X5_E70 X6_E71
Body	Initialize slide/tilt sunroof	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Drive	Injection deactivation	•	5_E60/E61
Drive	Injection rate	*	1_E81/E82/E87/E88 5_E39 5_E60/E61 7_E38 7_E65 X5_E53 X5_E70
Drive	Injector rate adjustment	•	3_E46 3_E90/E91/E92/E93 X5_E53
Chassis	Inquiry, line mode	•	5_E39 X5_E53
Chassis	Inquiry, transport mode	•	5_E39 X5_E53
Chassis	Lateral acceleration sensor	*	3_E46 5_E39 6_E63/E64 7_E38 7_E65 X5_E53 X5_E70 X6_E71 Z3_E36 Z4_E85/E86 Z8_E52
Drive	Learning Valvetronic limit positions	*	3_E46 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E70 Z4_E85/E86

- NOTES:

- This function is supported.O This function is not supported.
- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Chassis	Longitudinal acceleration sensor adjustment	•	1_E81/E82/E87/E88 5_E61/E60
Drive	Mechatronics adjustment	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E53 X5_E70 X6_E71
Chassis	Mix-up check, brake lines	•	1_E81/E82/E87/E88 3_E46 3_E90/E91/E92/E93 5_E39 5_E60/E61 6_E63/E64 7_E38 7_E65 X3_E83 X5_E53 X5_E70 X6_E71 Z4_E85/E86 Z8_E52
Drive	0il adjustment	•	3_E90/E91/E92/E93
Drive	0il change	•	
Drive	Oil change, QMVH	•	X6_E71
Drive	0il-level adjustment	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E70 X6_E71
Body	Operating parameter of evaporator temperature	•	5_E60/E61
			6_E63/E64
Drive	Parking lock, function test	•	3_E90/E91/E92/E93
Drive Body	Parking lock, hook test Personalisation number	•	3_E90/E91/E92/E93 1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Chassis	Positioning-travel check	•	7_E65
Body	Power down command	*	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Chassis	Preparation, wheel/axle alignment	0	 X5_E70 X6_E71

NOTES:	
--------	--

• This function is supported. O This function is not supported.

- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Chassis	Pressure sensor, front axle	•	6_E63/E64 7_E65 X5_E70 X6_E71
Chassis	Pressure sensors	•	3_E46 Z3_E36 Z4_E85/E86
Chassis	Protective deactivation	•	5_E39 X5_E53
Chassis	Rate of rotation sensor	•	3_E46 5_E39 7_E38 X5_E53 Z8_E52
Body	Read coding data	•	1_E81/E82/E87/E88 3_E46 3_E90/E91/E92/E93 5_E39 5_E60/E61 6_E63/E64 7_E38 X3_E83 X5_E53 X5_E70 X6_E71 Z4_E85/E86 Z8_E52
Chassis	Read in vehicle identification no. (ABS/ASC)	•	3_E46 Z3_E36
Body	Read operating data	•	7_E38
Body	Read out data	0	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Body	Read out operating data	•	3_E46 5_E39 X3_E83 X5_E53 Z4_E85/E86 Z8_E52
Drive	Read/delete adaptations	•	5_E60/E61
Body	Re-address flap motors	*	1_E81/E82/E87/E88 3_E90/E91/E92/E93 X5_E70 X6_E71
Drive Body	Refrigerant compressor Register battery change	•	5_E60/E61 7_E65 1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 X5_E70 X6_E71
Body	Register battery replacement	•	7_E65
Drive	Repair	•	X3_E83 X5_E70
			X6_E71

NOTES:

• This function is supported.

-Autel

O This function is not supported.

 \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
	Reset CBS Condition Based Service	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Body	Reset HIP module	0	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 X5_E70 X6_E71
Drive	Reset learning functions	•	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X3_E83 X5_E70 X6_E71
Chassis	Reset ABS motor relay clock counter	•	5_E39 7_E38
Drive	Reset pressure control	•	1_E81/E82/E87/E88 5_E39
Chassis	Ride-height adjustment	•	5_E59 X5_E53
Chassis	Ride-level adjustment	0	7_E65 X5_E53 X5_E70 X6_E71
Chassis	Run flat indicator	•	1_E81/E82/E87/E88
Body	Satellite	•	7_E65 Z4_E85/E86
Chassis	Shock-absorber performance	•	7_E65
Drive	Start basic injection quantity	*	3_E90/E91/E92/E93 X5_E53 X5_E70
Chassis	Start startup	•	6_E63/E64 7_E65 X5_E70 X6_E71
Drive	Starting basic injection quantity	•	1_E81/E82/E87/E88 5_E60/E61
Drive	Starting fuel delivery	*	3_E46 5_E39 5_E60/E61 7_E38 7_E65 X3_E83 X5_E53
Chassis	Startup	•	 X5_E70 X6_E71
Chassis	Startup fault	0	6_E63/E64 7_E65 X5_E70 X6_E71
Drive	Startup QMVH		X6_E71
Chassis	Startup/adjustment active front steering	*	1_E81/E82/E87/E88 6_E63/E64 X5_E70 X6_E71

NOTES:

This function is supported.O This function is not supported.

- \blacktriangle This function is the new feature in this version. % This function may be supported, which depends on the actual condition of the

Part	Components	MaxiDas	Body Type
Chassis	Steering-angle sensor	•	1_E81/E82/E87/E88_3_E46 5_E60/E61 6_E63/E64 X6_E71
Chassis	System startup after control-unit replace	•	7_E65
Drive	Teach in characteristic clutch-valve values		3_E46
Drive	Teach in clutch slip point	•	3_E46
Drive	Teach in valve characteristic curve	•	3_E90/E91/E92/E93
Drive	Transmission adaptation	•	3_E90/E91/E92/E93
Chassis	Tyre defect indicator	•	5_E60/E61 6_E63/E64
Body	Unlocking	*	1_E81/E82/E87/E88 3_E90/E91/E92/E93 5_E60/E61 6_E63/E64 7_E65 X5_E70 X6_E71
Chassis	Valves	•	5_E39 X5_E53
Chassis	Vent pressure accumulator	0	X5_E53
Body	Vent SRA		7_E65
Chassis	Ventilation		3_E46 Z3_E36
Chassis	Ventilation routine	•	X5_E70 X6_E71
Body	Vertical adjustment	•	5_E60/E61 6_E63/E64 7_E65
Chassis	Vertical-acceleration-sensor adjustment	•	X5_E70 X6_E71
Body	With tester	•	3_E46 X3_E83 Z4_E85/E86
Body	Without tester	•	3_E46 X3_E83 Z4_E85/E86
Chassis	Workshop braking-in	•	7_E65 7_F01/F02/F04 5_F10/F11
Chassis	Workshop mode	•	X5_E70 X6 E71