

NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

AS TOT S	special lunction pic	disc refer to	the special function table.	Day	- T- 1	-		4	
Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
145	1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	'98 1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	'98 1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	'98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	'98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	'99 1.9 JTD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	'98 1.4 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	'98 1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	'98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	'98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
146	'99 1.9 JTD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
155	1.6 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
155	1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
155	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
155	2.5 TD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
155	TD	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	'03 2.0 JTS	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	'03 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	'03 3.2 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	2.0 V6 TB	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	3.0 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	'98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	'98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
GTV	'98 2.0 V6 TB	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
GTV	'98 3.0 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'03 2.0 JTS	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'03 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'03 3.2 V6 24V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	3.0 V6	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'98 1.8 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'98 2.0 TS 16V	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'98 2.0 V6 TB	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
SPIDER	'98 3.0 V6	Safety	ICIT/TRW VAS95 alarm	•	•	•	•	•	0
145	1.3	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.7 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	'98 1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	'98 1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	'98 1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	'98 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	'99 1.9 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	TD	Safety	Bosch 5.3 ABS		•	•	•	•	0
146	1.3	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.4 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.6 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.7 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
146	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

NB TOT B	poolar ranotion pro-	abe refer to a	me special function table.	T.	ECU	Read	Erase	Live	Active	
Model	Version	Group	System		nfo.	Codes	Codes	Data	Test	Configuration
146	'98 1.4 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
146	'98 1.6 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
146	'98 1.8 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
146	'98 2.0 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
146	'99 1.9 JTD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
146	TD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	1.6 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	1.7 TS	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	1.8 TS	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	1.8 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	2.0 TS	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	2.0 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	2.5 TD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	TD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
155	V6	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	1.6 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	1.8 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	1.9 JTD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	2.0 TS 16V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	2.4 JTD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	2.5 V6 24V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
156	SELESPEED	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	2.0 TS ECO	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	QV 24V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	SUPER 2.0 TS	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	SUPER TD	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	SUPER V6 24V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	SUPER V6 24V	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	SUPER V6 TB	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	V6 ECO	Safety	Bosch 5.3 ABS		•	•	•	•	•	0
164	V6 ECO C. A.	Safety	Bosch 5.3 ABS		•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
166	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	2.4 JTD	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	2.5 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
166	3.0 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	'03 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	2.0 V6 TB	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	3.0 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	'98 1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	'98 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	'98 2.0 V6 TB	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
GTV	'98 3.0 V6 24V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	'03 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	3.0 V6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	'98 1.8 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	'98 2.0 TS 16V	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	'98 2.0 V6 TB	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
SPIDER	'98 3.0 V6	Safety	Bosch 5.3 ABS	•	•	•	•	•	0
145	1.3	Engine - Gearbox	Magneti Marelli IAW 18F Injection	•	0	0	•	•	0
146	1.3	Engine - Gearbox	Magneti Marelli IAW 18F Injection	•	0	0	•	•	0
145	1.3	Engine - Gearbox	Magneti Marelli IAW 08F Injection	•	0	0	•	•	0
146	1.3	Engine - Gearbox	Magneti Marelli IAW 08F Injection	•	0	0	•	•	0
33	1.3 I.E. ECO	Engine - Gearbox	Magneti Marelli IAW 08.68 Injection	•	0	0	•	•	0
33	1.4 I.E. ECO	Engine - Gearbox	Magneti Marelli IAW 08.68 Injection	•	0	0	•	•	0
145	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v eng.)	•	•	•	•	•	0
146	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v eng.)	•	•	•	•	•	0
155	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v eng.)	•	•	•	•	•	0
GTV	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v eng.)	•	•	•	•	•	0
SPIDER	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (2.0 TS 16v eng.)	•	•	•	•	•	0
145	1. 3	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1			pecial function table.	ECU	Read	Erase	Live	Active	Configuration
Model	Version	Group	System	info.	Codes	Codes	Data	Test	Configuration
145	1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1. 6	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1.6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1.7 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1.8 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	2.0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	'98 1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	'98 1.6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	'98 1.8 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	'98 2.0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	'99 1.9 JTD	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	TD	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.3	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.6	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.7 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	1.8 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	2.0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	'98 1.4 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	'98 1.6 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	'98 1.8 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	'98 2.0 TS 16V	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	'99 1.9 JTD	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
146	TD	Comfort	Borletti MCC55F climate control	•	•	•	•	•	0
145	1.4 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
145	1.6 TS 16V		Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
145	1.8 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
145	2.0 TS 16V		Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
146	1.4 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
146	1.6 TS 16V		Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
146	1.8 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
146	2. 0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
155	1.6 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
155	1.8 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
155	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
156	1.6 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
GTV	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
SPIDER	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M2.10.4 Injection (TS 16v eng.)	•	•	•	•	•	0
155	1.7 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El. key)	•	•	•	•	•	0
155	1.8 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El. key)	•	•	•	•	•	0
155	2.0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El. key)	•	•	•	•	•	0
164	2.0 TS ECO	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El. key)	•	•	•	•	•	0
164	SUPER 2.0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng. El. key)	•	•	•	•	•	0
164	QV 24V	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El. key)	•	•	•	•	•	0
164	SUPER V6 24V	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El. key)	•	•	•	•	•	0
164	SUPER V6 24V	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El. key)	•	•	•	•	•	0
164	V6 ECO	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El. key)	•	•	•	•	•	0
164	V6 ECO C.A.	Engine - Gearbox	Bosch Motronic M1.7 Injection (V6 3.0 eng. El. key)	•	•	•	•	•	0
155	1.7 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)	•	•	•	•	•	0
155	1.8 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)	•	•	•	•	•	0
155	2.0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)	•	•	•	•	•	0
164	2.0 TS ECO	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)	•	•	•	•	•	0
164	SUPER 2.0 TS	Engine - Gearbox	Bosch Motronic M1.7 Injection (TS eng.)	•	•	•	•	•	0
145	1.7 16V	Engine - Gearbox	Bosch Motronic M2.10.3 Injection (1.7 16v eng. El. key)	•	•	•	•	•	0
146	1.7 16V	_	Bosch Motronic M2.10.3 Injection (1.7 16v eng. El. key)	•	•	•	•	•	0
GTV	3.0 V6 24V	_	Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El.	•	•	•	•	•	0
GTV	'98 3.0 V6 24V		Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El.	•	•	•	•	•	0
SPIDER	3.0 V6		Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. El.	•	•	•	•	•	0
SPIDER	' 98 3.0 V6	Engine - Gearbox	Bosch Motronic M3.7.1 Injection (3.0 12/24v eng. E1.	•	•	•	•	•	0
164	Q4	Engine - Gearbox	Bosch Motronic M3.7.1 injection (3.0 24v 4X4 eng.)	•	•	•	•	•	0
164	SUPER V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
		·		info.	Codes	Codes	Data	Test	
GTV	2.0 V6 TB	_	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
GTV	'98 2.0 V6 TB	_	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
SPIDER	'98 2.0 V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T.Petr. El. Key eng.)	•	•	•	•	•	0
164	QV 24V	_	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	SUPER V6 24V	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	SUPER V6 24V	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	V6 ECO	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
164	V6 ECO C.A.	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 3.0 eng.)	•	•	•	•	•	0
155	V6	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 2.5 El. Key eng.)	•	•	•	•	•	0
155	V6	Engine - Gearbox	Bosch Motronic M1.7 injection (V6 2.5 eng.)	•	•	•	•	•	0
164	SUPER V6 TB	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T/Petr. eng.)	•	•	•	•	•	0
164	V6 TURBO ECO	Engine - Gearbox	Bosch Motronic ML4.1 injection (V6 T/Petr. eng.)	•	•	•	•	•	0
145	1.7 16V	Engine - Gearbox	Bosch Motronic M2.10.3 injection (1.7 16v eng.)	•	•	•	•	•	0
146	1.7 16V	Engine - Gearbox	Bosch Motronic M2.10.3 injection (1.7 16v eng.)	•	•	•	•	•	0
156	2.4 JTD	Engine - Gearbox	Bosch EDC15 Diesel Injection (2.4 TD d.i. eng.)	•	•	•	•	•	0
166	2.4 JTD	Engine - Gearbox	Bosch EDC15 Diesel Injection (2.4 TD d.i. eng.)	•	•	•	•	•	0
156	1.6 TS 16V	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	2.4 JTD	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied MY97 Airbag (2F-2P-I-S)	•	•	•	•	0	0
156	1.6 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
156	1.8 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
156	1.9 JTD	Comfort	Harrison climate control	•	•	•	•	0	0
156	2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
156	2.4 JTD	Comfort	Harrison climate control	•	•	•	•	0	0
156	2.5 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
156	SELESPEED	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	'03 2.0 JTS	Comfort	Harrison climate control	•	•	•	•	0	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
GTV	'03 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	'03 3.2 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	'98 1.8 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	'98 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	'98 2.0 V6 TB	Comfort	Harrison climate control	•	•	•	•	0	0
GTV	'98 3.0 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'03 2.0 JTS	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'03 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'03 3.2 V6 24V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'98 1.8 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'98 2.0 TS 16V	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'98 2.0 V6 TB	Comfort	Harrison climate control	•	•	•	•	0	0
SPIDER	'98 3.0 V6	Comfort	Harrison climate control	•	•	•	•	0	0
164	QV	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
164	V6	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
164	V6 ECO	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
164	V6 ECO C. A.	Engine - Gearbox	Bosch Motronic ML4.1 Injection (3.0 V6 eng.)	•	•	•	•	•	0
156	1.8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection	•	•	•	•	•	0
156	2.0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection	•	•	•	•	•	0
156	2.5 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (2.5 V6 eng.)	•	•	•	•	•	0
145	'99 1.9 JTD	Engine - Gearbox	Bosch Diesel EDC15 injection (1.9 TD d.i. engine)	•	•	•	•	•	0
146	'99 1.9 JTD	Engine - Gearbox	Bosch Diesel EDC15 injection (1.9 TD d.i. engine)	•	•	•	•	•	0
156	1.9 JTD	Engine - Gearbox	Bosch Diesel EDC15 injection (1.9 TD d.i. engine)	•	•	•	•	•	0
145	1.3	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1.4 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1.6	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1.6 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1.7 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	1.8 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	2.0 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	'98 1.4 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0



NOTES:

● This function is supported. ▲ This function is the new feature in this version.

O This function is not supported.
** This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
145	'98 1.6 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	'98 1.8 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	'98 2.0 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	'99 1.9 JTD	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
145	TD	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	1.3	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	1.4 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	1.6	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	1.6 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	1.7 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	1.8 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	2.0 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	'98 1.4 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	'98 1.6 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	'98 1.8 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	'98 2.0 TS 16V	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	'99 1.9 JTD	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
146	TD	Safety	TRW MY 97 Airbag (2F)	•	•	•	•	0	0
164	SUPER V6 24V	Engine - Gearbox	ZF 4HP18 K Automatic Transmission	•	•	•	•	•	0
166	2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
166	2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
166	2.4 JTD	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
166	2.5 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
166	3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
145	'98 1.4 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	•	•	•	•	•	0
145	'98 1.6 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	•	•	•	•	•	0
145	'98 1.8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS '98)	•	•	•	•	•	0
145	'98 2.0 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS'98)	•	•	•	•	•	0
146	'98 1.4 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS'98)	•	•	•	•	•	0
146	'98 1.6 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS'98)	•	•	•	•	•	0
146	'98 1.8 TS 16V	Engine - Gearbox	Bosch Motronic M1.5.5 injection (eng. TS'98)	•	•	•	•	•	0



NOTES:

● This function is supported. ▲ This function

▲ This function is the new feature in this version.

O This function is not supported.
** This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
146	'98 2.0 TS 16V	Engine - Cearboy	Bosch Motronic M1.5.5 injection (eng. TS'98)	info.	Codes	Codes	Data	Test	0
156	1. 6 TS 16V	_	Bosch Motronic M1.5.5 injection (eng. TS '98)			•			0
156	1. 8 TS 16V	_	Bosch Motronic M1.5.5 injection (eng. TS '98)			•		•	0
156	2. 0 TS 16V		Bosch Motronic M1.5.5 injection (eng. TS '98)			•			0
166	2. 0 TS 16V		Bosch Motronic M1.5.5 injection (eng. TS '98)			•		•	0
GTV	'98 1.8 TS 16V	_	Bosch Motronic M1.5.5 injection (eng. TS '98)			•			0
GTV	'98 2.0 TS 16V	_	Bosch Motronic M1.5.5 injection (eng. TS '98)			•			0
SPIDER	'98 1.8 TS 16V		Bosch Motronic M1.5.5 injection (eng. TS '98)			•	•		0
SPIDER	'98 2.0 TS 16V		Bosch Motronic M1.5.5 injection (eng. TS '98)			•	•	•	0
GTV	'03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P)	•		•		0	0
GTV	' 03 2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)		•	•	•	0	0
GTV	'03 3.2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	2. 0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	2. 0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	3. 0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	'98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
GTV	'98 3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'03 3.2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	3.0 V6	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
SPIDER	'98 3.0 V6	Safety	TRW MY 97 Air Bag (2F-2P)	•	•	•	•	0	0
145	'98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
145	'98 1.6 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
145	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

18	AS TOP SP	ectar runction pres	ase refer to the	special function table.						
145	Mode1	Version	Group	System						Configuration
146	145	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
146	145	'99 1.9 JTD	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
146	146	'98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
146	146	'98 1.6 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
146	146	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
166	146	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
166	146	'99 1.9 JTD	Safety	TRW MY 97 Air Bag (2F-S)	•	•	•	•	0	0
166	166	2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
166	166	2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
166	166	2.4 JTD	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
GTV	166	2.5 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
GTV '03 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2P-I)	166	3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
CTV 03 3.2 V6 24V Safety TRW MY 97 Air Bag (2F-2P-I)	GTV	'03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
Section Sect	GTV	'03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
STV '98 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2P-1)	GTV	'03 3.2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
Second 18 2.0 10 18 18 18 18 18 18 1	GTV	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '98 3.0 V6 24V Safety TRW MY 97 Air Bag (2F-2P-I)	GTV	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '03 2.0 JTS Safety TRW MY 97 Air Bag (2F-2P-I)	GTV	'98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '03 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2P-I)	GTV	'98 3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '03 3.2 V6 24V Safety TRW MY 97 Air Bag (2F-2P-I)	SPIDER	'03 2.0 JTS	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '98 1.8 TS 16V Safety TRW MY 97 Air Bag (2F-2P-I)	SPIDER	'03 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '98 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2P-I) • • • • • • • • • • • • • • • • • • •	SPIDER	'03 3.2 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '98 2.0 V6 TB Safety TRW MY 97 Air Bag (2F-2P-I) Image: Control of the co	SPIDER	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
SPIDER '98 3.0 V6 Safety TRW MY 97 Air Bag (2F-2P-I) • • • • • • • • • • • • • • • • • • •	SPIDER	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
145 '98 1.4 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○ 145 '98 1.6 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○ 145 '98 1.8 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ● ○ ○ 145 '98 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ● ○ ○	SPIDER	'98 2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
145 '98 1.6 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○ 145 '98 1.8 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○ 145 '98 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○	SPIDER	'98 3.0 V6	Safety	TRW MY 97 Air Bag (2F-2P-I)	•	•	•	•	0	0
145 '98 1.8 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○ 145 '98 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) ● ● ● ● ○ ○	145	'98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
145 '98 2.0 TS 16V Safety TRW MY 97 Air Bag (2F-2L-S) • • • • • • •	145	'98 1.6 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
	145	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
145 '99 1.9 JTD Safety TRW MY 97 Air Bag (2F-2L-S)	145	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
	145	'99 1.9 JTD	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
146	'98 1.4 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
146	'98 1.6 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
146	'98 1.8 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
146	'98 2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
146	'99 1.9 JTD	Safety	TRW MY 97 Air Bag (2F-2L-S)	•	•	•	•	0	0
166	2.0 TS 16V	Safety	TRW MY 97 Air Bag (2F-2P-I-S)	•	•	•	•	0	0
166	2.0 V6 TB	Safety	TRW MY 97 Air Bag (2F-2P-I-S)	•	•	•	•	0	0
166	2.4 JTD	Safety	TRW MY 97 Air Bag (2F-2P-I-S)	•	•	•	•	0	0
166	2.5 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I-S)	•	•	•	•	0	0
166	3.0 V6 24V	Safety	TRW MY 97 Air Bag (2F-2P-I-S)	•	•	•	•	0	0
156	1.6 TS 16V	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	2.4 JTD	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied MY 97 Airbag (2F-2P)	•	•	•	•	0	0
156	1.6 TS 16V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	2.4 JTD	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied MY 97 Air Bag (2F-2P-2L-I-S)	•	•	•	•	0	0
166	2.5 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 / 3.0)	•	•	•	•	•	0
166	3.0 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 / 3.0)	•	•	•	•	•	0
GTV	'98 3.0 V6 24V	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 / 3.0)	•	•	•	•	•	0
SPIDER	'98 3.0 V6	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.5 / 3.0)	•	•	•	•	•	0
166	2.0 TS 16V	Safety	Bosch 5.3 TC ABS	•	•	•	•	•	0
166	2.0 V6 TB	Safety	Bosch 5.3 TC ABS	•	•	•	•	•	0
166	2.4 JTD	Safety	Bosch 5.3 TC ABS	•	•	•	•	•	0



NOTES:

● This function is supported. ▲ This function is the new

▲ This function is the new feature in this version.

O This function is not supported.
** This function may be supported, which depends on the actual condition of the vehicle.

ns for spe	cerar runceron pres	ise refer to the .	special function table.		1 - 1				
Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
156 MY	GTA 3.2 V6	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
166	2.5 V6 24V	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
166	3.0 V6 24V	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
GTV	'03 2.0 JTS	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
GTV	'03 3.2 V6 24V	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
SPIDER	'03 2.0 JTS	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
SPIDER	'03 3.2 V6 24V	Safety	Bosch 5.3 ASR ABS	•	•	•	•	•	0
166	2.0 V6 TB	Engine - Gearbox	Bosch Motronic ME2.1 injection (eng. V6 2.0 TB)	•	•	•	•	•	0
166	'03 2.0 TS 16V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	'03 2.4 JTD 20V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	'03 2.5 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	'03 3.0 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	'03 3.2 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	2.0 TS 16V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	2.0 V6 TB	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	2.4 JTD	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	2.5 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	3.0 V6 24V	Instrumentation	Navigator/Siemens ICS instrument	•	•	•	•	0	0
166	'03 2.5 V6 24V	Engine - Gearbox	ZF 4HP20 Automatic Transmission	•	•	•	•	•	0
166	'03 3.0 V6 24V	Engine - Gearbox	ZF 4HP20 Automatic Transmission	•	•	•	•	•	0
166	2.5 V6 24V	Engine - Gearbox	ZF 4HP20 Automatic Transmission	•	•	•	•	•	0
166	3.0 V6 24V	Engine - Gearbox	ZF 4HP20 Automatic Transmission	•	•	•	•	•	0
156	2.5 V6 24V	Engine - Gearbox	AISIN Q-SYSTEM Automatic Gearbox	•	•	•	•	•	0
156 MY	2.5 V6 24V	Engine - Gearbox	AISIN Q-SYSTEM Automatic Gearbox	•	•	•	•	•	0
156	SELESPEED	Engine - Gearbox	Marelli SELESPEED Automatic Gearbox	•	•	•	•	•	0
156	SELESPEED	Engine - Gearbox	Bosch Motronic ME3.1 injection (Selespeed)	•	•	•	•	•	0
145	'98 1.4 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	'98 1.6 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	'98 1.8 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	'98 2.0 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
145	'99 1.9 JTD	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

			special function table.	ECU	Read	Erase	Live	Active	
Model	Version	Group	System	info.	Codes	Codes	Data	Test	Configuration
146	'98 1.4 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	'98 1.6 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	'98 1.8 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	'98 2.0 TS 16V	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
146	'99 1.9 JTD	Safety	Trw MY 97 airbag (2F-2L)	•	•	•	•	0	0
166	2.0 TS 16V	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	2.0 V6 TB	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	2.4 JTD	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	2.5 V6 24V	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	3.0 V6 24V	Safety	TRW MY 97 airbag (2F-2P-2L-I)	•	•	•	•	0	0
166	3.0 V6 24V	Safety	Bosch 5.7 VDC ABS	•	•	•	•	•	0
156	1.6 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	2.4 JTD	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied MY 97 Airbag (2F-2P-I)	•	•	•	•	0	0
156	1.6 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	2.4 JTD	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied MY 97 Airbag (2F-2P-2L-I)	•	•	•	•	0	0
147	1.6 TS 16V 105CV	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	1.6 TS 16V 120CV	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	1.9 JTD	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	1.9 JTD 16V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	2.0 TS 16V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	GTA 3.2 V6	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
147	GTA SELESPEED	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	SELESPEED	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	1.6 TS 16V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	1.8 TS 16V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	1.9 JTD	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	2.0 TS 16V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	2.4 JTD	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	2.5 V6 24V	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
156	SELESPEED	Safety	Allied Airbag MY 97 (2F-2P-2L-2T-I)	•	•	•	•	0	0
147	SELESPEED	Engine - Gearbox	Marelli CFC208F SELESPEED Automatic Gearbox	•	•	•	•	•	0
156 MY	JTS SELESPEED	Engine - Gearbox	Marelli CFC208F SELESPEED Automatic Gearbox	•	•	•	•	•	0
156 MY	SELESPEED	Engine - Gearbox	Marelli CFC208F SELESPEED Automatic Gearbox	•	•	•	•	•	0
156 MY	GTA SELESPEED	Engine - Gearbox	Marelli SELESPEED CFC218F Automatic Gearbox	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	1.9 JTD	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	2.0 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	GTA SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.0 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	2.5 V6 24V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
156 MY	JTS 2.0	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
156 MY	SELESPEED	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	3.2 V6 24V	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
GT	JTS 2.0	Safety	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	'03 2.0 TS 16V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	'03 2.5 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	'03 3.0 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	'03 3.2 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.0 TS 16V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.0 V6 TB	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.4 JTD	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	2.5 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	3.0 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-I)	•	•	•	•	•	0
166	'03 2.0 TS 16V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	'03 2.5 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	'03 3.0 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
166	'03 3.2 V6 24V	Safety	TRW MY 99 Airbag (2F-2P-2L-2T-I)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
		•		info.	Codes	Codes	Data	Test	
156 MY	1.8 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.0 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	2.5 V6 24V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	JTS 2.0	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
156 MY	SELESPEED	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	3.2 V6 24V	Safety	Bosch ABS 5.7	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch ABS 5.7	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 4 JTD 20V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	2. 5 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	GTA SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•			0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
156 MY	JTS 2.0	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
156 MY	SELESPEED	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	'03 2.0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	'03 2.5 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	'03 3.0 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	'03 3.2 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	2.0 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	2.4 JTD	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	2.5 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
166	3.0 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	3.2 V6 24V	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch ABS 5.7 VDC	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.6 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.8 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.9 JTD	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2.0 TS 16V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	2.5 V6 24V	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

		liber refer to the	special function table.	ECU	Read	Erase	Live	Active	
Model	Version	Group	System	info.	Codes	Codes	Data	Test	Configuration
156 MY	GTA SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	JTS 2.0	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	JTS SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
156 MY	SELESPEED	Safety	Bosch ABS 5.7 ASR/TC	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.9 JTD	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.9 JTD 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	2.0 TS 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	GTA 3.2 V6	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	GTA SELESPEED	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	SELESPEED	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	1.8 TS 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	1.9 JTD 16V	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	3.2 V6 24V	Instrumentation	Marelli Connect	•	•	•	•	•	0
GT	JTS 2.0	Instrumentation	Marelli Connect	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	TRW driver's door	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	TRW driver's door	•	•	•	•	•	0
147	1.9 JTD	Other systems	TRW driver's door	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	TRW driver's door	•	•	•	•	•	0
147	2.0 TS 16V	Other systems	TRW driver's door	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	TRW driver's door	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	TRW driver's door	•	•	•	•	•	0
147	SELESPEED	Other systems	TRW driver's door	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	TRW Boot	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	TRW Boot	•	•	•	•	•	0
147	1.9 JTD	Other systems	TRW Boot	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	TRW Boot	•	•	•	•	•	0
147	2.0 TS 16V	Other systems	TRW Boot	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	TRW Boot	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	TRW Boot	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
147	SELESPEED	Other systems	TRW Boot	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Marelli Body Computer	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Marelli Body Computer	•	•	•	•	•	0
147	1.9 JTD	Safety	Marelli Body Computer	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Marelli Body Computer	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Marelli Body Computer	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Marelli Body Computer	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Marelli Body Computer	•	•	•	•	•	0
147	SELESPEED	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	3.2 V6 24V	Safety	Marelli Body Computer	•	•	•	•	•	0
GT	JTS 2.0	Safety	Marelli Body Computer	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	1.6 TS 16V 120CV	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	1.9 JTD	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	1.9 JTD 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	2.0 TS 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	GTA 3.2 V6	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	GTA SELESPEED	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	SELESPEED	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
GT	1.8 TS 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
GT	1.9 JTD 16V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
GT	3.2 V6 24V	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
GT	JTS 2.0	Instrumentation	Mannesman VDO instrument panel	•	•	•	•	•	0063 0032 0041
147	1.6 TS 16V 105CV	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection (2 lambda sensors)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	GTA 3.2 V6	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	GTA SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

ns for spe-	tai ranction pica	se rerer to the s	special function table.			_			
Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
156	1.6 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	1.8 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156	SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	1.6 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	1.8 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	GTA SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
156 MY	SELESPEED	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
166	'03 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
166	'03 3.2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
166	2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GT	1.8 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GT	3. 2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GTV	'03 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GTV	'03 3.2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
GTV	'98 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
SPIDER	'03 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
SPIDER	'03 3.2 V6 24V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
SPIDER	'98 2.0 TS 16V	Engine - Gearbox	Bosch Motronic Me7.3.1 EOBD injection	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1.9 JTD	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1.9 JTD 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	2.0 TS 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	GTA 3.2 V6	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	GTA SELESPEED	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	SELESPEED	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
GT	1.8 TS 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
GT	1.9 JTD 16V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
GT	3.2 V6 24V	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
GT	JTS 2.0	Comfort	Delphi Climate control (Dual zone)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	1.9 JTD	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	1.9 JTD 16V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	2.0 TS 16V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	GTA 3.2 V6	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	GTA SELESPEED	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
147	SELESPEED	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
GT	1.8 TS 16V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
GT	1.9 JTD 16V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
GT	3.2 V6 24V	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
GT	JTS 2.0	Comfort	Delphi Climate control (Single zone)	•	•	•	•	•	0
156	2.5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
156 MY	2.5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	'03 2.5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	'03 3.0 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	2.5 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
166	3.0 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
GTV	'98 3.0 V6 24V	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
SPIDER	'98 3.0 V6	Engine - Gearbox	Bosch Motronic EOBD ME3.1 Injection (eng. V6)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	2.0 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.6 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.8 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

	l land transfer prea	l leter to the	special function table.	ECU	Read	Erase	Live	Active	
Model	Version	Group	System	info.	Codes	Codes	Data	Test	Configuration
156 MY	1.9 JTD	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.0 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	2.5 V6 24V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	GTA SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	JTS 2.0	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	JTS SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
156 MY	SELESPEED	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	1.8 TS 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	1.9 JTD 16V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	3.2 V6 24V	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
GT	JTS 2.0	Other systems	Bosch discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	1.6 TS 16V 120CV	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	1.9 JTD	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	1.9 JTD 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	2.0 TS 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	GTA 3.2 V6	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	GTA SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	1.6 TS 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	1.8 TS 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	1.9 JTD	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	1.9 JTD 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	2.0 TS 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	2.4 JTD 10V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	2.4 JTD 20V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	2.5 V6 24V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

166 MY	As for spec	rai function prea	se refer to the s	pecial function table.						
156 MW	Mode1	Version	Group	System	ECU info.	Read Codes		Live Data	Active Test	Configuration
156 WY	156 MY	GTA 3.2 V6	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 NY SELESPEED	156 MY	GTA SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156 MY	156 MY	JTS 2.0	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
CT	156 MY	JTS SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
CT	156 MY	SELESPEED	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
GT	GT	1.8 TS 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
O	GT	1.9 JTD 16V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
147	GT	3.2 V6 24V	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156	GT	JTS 2.0	Other systems	Bosch discharge headlamp (right)	•	•	•	•	0	0
156	147	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
1.9 JTD Engine - Gearbox Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	156	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
156 MY	156	2.4 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
166	156 MY	1.9 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
159	156 MY	2.4 JTD 10V	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
159	166	2.4 JTD	Engine - Gearbox	Bosch EDC15 CF3/EOBD Diesel Injection (eng. 1.9/2.4)	•	•	•	•	•	0
159	159	1.8 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	159	1.8 JTS TB 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	159	1.9 JTS 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	159	1.9 MJET 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159 2.2 JTS 16V Safety ESP TRW Lucas ABS	159	1.9 MJET 8V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159	159	2.0 JTD 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
159 3.2 V6 24V Safety ESP TRW Lucas ABS ●	159	2.2 JTS 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA 1.8 JTS TB 16V Safety ESP TRW Lucas ABS • <td>159</td> <td>2.4 MJET 20V</td> <td>Safety</td> <td>ESP TRW Lucas ABS</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>•</td> <td>0</td>	159	2.4 MJET 20V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA 2.0 JTD 16V Safety ESP TRW Lucas ABS •	159	3.2 V6 24V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA 2.2 JTS 16V Safety ESP TRW Lucas ABS •	BRERA	1.8 JTS TB 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA 2.4 MJET 20V Safety ESP TRW Lucas ABS •	BRERA	2.0 JTD 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
BRERA 3.2 V6 24V Safety ESP TRW Lucas ABS •	BRERA	2.2 JTS 16V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
147 1.6 TS 16V 120CV Engine - Gearbox Injection - Bosch Motronic Me7.3.1 Outside EEC	BRERA	2.4 MJET 20V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
	BRERA	3. 2 V6 24V	Safety	ESP TRW Lucas ABS	•	•	•	•	•	0
147 2 0 TS 16V Engine Combay Unjection People Methania Me7 2 1 Outside EEC	147	1.6 TS 16V 120CV	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
2.0 15 10v Engine - Gearbox Injection - bosch motronic mer. 5.1 Outside EEC	147	2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
147	SELESPEED	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	11110.	Codes	Codes	Data	Test	0
156	1. 6 TS 16V		Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156	2. 0 TS 16V		Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156	SELESPEED		Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156 MY	2.0 TS 16V	_	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156 MY	GTA 3.2 V6	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
156 MY	SELESPEED	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
GTV	'03 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
GTV	'98 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
SPIDER	'03 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
SPIDER	'98 2.0 TS 16V	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Engine - Gearbox	Injection - Bosch Motronic Me7.3.1 Outside EEC (2	•	•	•	•	•	0
156	2.5 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	'03 2.5 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	'03 3.0 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	2.5 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
166	3.0 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
GTV	'98 3.0 V6 24V	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
SPIDER	'98 3.0 V6	Engine - Gearbox	Injection - Bosch Motronic Me3.1 (eng. V6) Outside EEC	•	•	•	•	•	0
159	1.8 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.8 JTS TB 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.9 JTS 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.9 MJET 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	1.9 MJET 8V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	2.0 JTD 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	2.2 JTS 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	2.4 MJET 20V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
159	3. 2 V6 24V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	1.8 JTS TB 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	2.0 JTD 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	2.2 JTS 16V	Comfort	Valeo Parking control unit	•	•	•	•	0	0



NOTES:

● This function is supported. ▲ This

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
BRERA	2.4 MJET 20V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
BRERA	3. 2 V6 24V	Comfort	Valeo Parking control unit	•	•	•	•	0	0
156 MY	JTS 2.0	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
156 MY	JTS SELESPEED	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
GT	JTS 2.0	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
GTV	'03 2.0 JTS	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
SPIDER	'03 2.0 JTS	Engine - Gearbox	Bosch Motronic MeD7.11 EOBD injection	•	•	•	•	•	0
147	1.9 JTD 16V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
GT	1.9 JTD 16V	Engine - Gearbox	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4 eng.)	•	•	•	•	•	0
156 MY	JTS 2.0	Engine - Gearbox	Bosch Motronic MeD7.11 Extra EEC Injection	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	3.2 V6 24V	Safety	Bosch 8 ABS	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch 8 ABS	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	2.0 TS 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

ns for sp	ectal function pres	received to the	special function table.						
Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
147	GTA SELESPEED	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	SELESPEED	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	'03 2.0 TS 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	'03 2.5 V6 24V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	'03 3.0 V6 24V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
166	'03 3.2 V6 24V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1.4 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Other systems	Valeo discharge headlamp (left)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	3.2 V6 24V	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch 8 VDC ABS	•	•	•	•	•	0
156 MY	1.6 TS 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	1.8 TS 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	1.9 JTD	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	1.9 JTD 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	2.0 TS 16V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	2.4 JTD 10V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	2.4 JTD 20V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	2.5 V6 24V	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
156 MY	GTA 3.2 V6	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	GTA SELESPEED	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	JTS 2.0	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	JTS SELESPEED	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
156 MY	SELESPEED	Comfort	Delphi Climate Control MY 03 (Single-zone)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	1.9 JTD	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	1.9 JTD 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	2.0 TS 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	GTA 3.2 V6	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	GTA SELESPEED	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
147	SELESPEED	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	'03 2.0 TS 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	'03 2.5 V6 24V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	'03 3.0 V6 24V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	'03 3.2 V6 24V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.4 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Other systems	Valeo discharge headlamp (right)	•	•	•	•	•	0
166	'03 2.4 JTD 20V	Engine - Gearbox	AISIN YLII 5 Automatic Gearbox (1)	•	•	•	•	•	0
GT	1.8 TS 16V	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
GT	1.9 JTD 16V	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
GT	3.2 V6 24V	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
GT	JTS 2.0	Other systems	TRW Driver's Door (1)	•	•	•	•	•	0
159	1.8 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
159	1.9 MJET 8V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	2.2 JTS 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	TRW Lucas ABS	•	•	•	•	•	0
159	3.2 V6 24V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	TRW Lucas ABS	•	•	•	•	•	0
BRERA	3.2 V6 24V	Safety	TRW Lucas ABS	•	•	•	•	•	0
147	GTA SELESPEED	Engine - Gearbox	Marelli Automatic Gearbox SELESPEED CFC218F (1)	•	•	•	•	•	117
147	SELESPEED	Engine - Gearbox	Marelli Automatic Gearbox SELESPEED CFC208F (1)	•	•	•	•	•	117
GT	JTS 2.0	Engine - Gearbox	Marelli Automatic Gearbox SELESPEED CFC208F (1)	•	•	•	•	•	117
147	1.9 JTD	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
147	1.9 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
156 MY	1.9 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
159	1.9 MJET 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

ns for spe	crai runction prea	se refer to the s	special function table.	•					
Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
159	1.9 MJET 8V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
159	2.4 MJET 20V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
166	'03 2.4 JTD 20V	Engine – Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
BRERA	2.4 MJET 20V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
GT	1.9 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF4/EOBD (eng. 1.9/2.4)	•	•	•	•	•	0029 0057 0058 0059 0060 0054 0030 0042 0014 0062 0053 0052 0037 0002 0020
159	1.8 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.9 MJET 8V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	2.0 JTD 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	2.2 JTS 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	2.4 MJET 20V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	3.2 V6 24V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
		Group	System	info.	Codes	Codes	Data	Test	Collinguration
BRERA	2.0 JTD 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
BRERA	3.2 V6 24V	Comfort	Driver's seat Lear 2	•	•	•	•	•	0
159	1.8 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1.9 MJET 8V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	2.0 JTD 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	2. 2 JTS 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	2.4 MJET 20V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	3. 2 V6 24V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Comfort	Passenger seat Lear 2	•	•	•	•	•	0
159	1.8 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	2.2 JTS 16V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	3.2 V6 24V	Other systems	Front Door G.E. PROCOND	•	•	•	•	•	0
159	1.8 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
159	1.9 MJET 8V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.2 JTS 16V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	3.2 V6 24V	Other systems	Driver's Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.2 JTS 16V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	3.2 V6 24V	Other systems	Passenger Door G.E. PROCOND 2	•	•	•	•	•	0
159	1.8 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	1.8 JTS TB 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	1.9 JTS 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	1.9 MJET 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	1.9 MJET 8V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	2.0 JTD 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	2. 2 JTS 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	2.4 MJET 20V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	3.2 V6 24V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
BRERA	1.8 JTS TB 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
BRERA	2.0 JTD 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
BRERA	2.2 JTS 16V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
BRERA	2.4 MJET 20V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
BRERA	3. 2 V6 24V	Instrumentation	Instrument panel Siemens 2	•	•	•	•	•	0069 0063 0064 0065 0034 0068
159	1.8 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	1.9 JTS 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	1.9 MJET 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	1.9 MJET 8V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	2.0 JTD 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	2.2 JTS 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	2.4 MJET 20V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	3.2 V6 24V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
BRERA	3.2 V6 24V	Instrumentation	Marelli 3 Connect (multi-model)	•	•	•	•	•	0
159	1.8 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	2.2 JTS 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	3.2 V6 24V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
BRERA	2.0 JTD 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
BRERA	3.2 V6 24V	Other systems	Litronic discharge headlamp (left)	•	•	•	•	•	0
159	1.8 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1.9 MJET 8V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	2.0 JTD 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	2.2 JTS 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	2.4 MJET 20V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	3.2 V6 24V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
BRERA	3.2 V6 24V	Comfort	Climate control Delphi 2 (Single-zone)	•	•	•	•	•	0
159	1.8 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1.9 JTS 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1.9 MJET 8V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	2.0 JTD 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	2.2 JTS 16V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	2.4 MJET 20V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	3.2 V6 24V	Other systems	Boot G. E. PROCOND 2	•	•	•	•	•	0
159	1.8 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Climate control Delphi (Two/Three-zone)	•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
159	1.9 MJET 8V	Comfort	Climate control Delphi (Two/Three-zone)	info.	Codes	Codes	Data	Test	0
159	2. 0 JTD 16V	Comfort	Climate control Delphi (Two/Three-zone)			•			0
159	2. 2 JTS 16V	Comfort	Climate control Delphi (Two/Three-zone)			•			0
159	2. 4 MJET 20V	Comfort	Climate control Delphi (Two/Three-zone)			•			0
159	3. 2 V6 24V	Comfort	Climate control Delphi (Two/Three-zone)			•	•		0
BRERA	1.8 JTS TB 16V	Comfort	Climate control Delphi (Two/Three-zone)			•			0
BRERA	2. 0 JTD 16V	Comfort	Climate control Delphi (Two/Three-zone)			•			0
BRERA	2. 2 JTS 16V	Comfort	Climate control Delphi (Two/Three-zone)			•			0
BRERA	2. 4 MJET 20V	Comfort	Climate control Delphi (Two/Three-zone)				•		0
BRERA	3. 2 V6 24V	Comfort	Climate control Delphi (Two/Three-zone)						0
159	1. 9 JTS 16V		Bosch Motronic Injection MeD7.6.1 CF4/EOBD (eng.			•			0
159	2. 2 JTS 16V		Bosch Motronic Injection MeD7.6.1 CF4/EOBD (eng.			•	•		0
BRERA	2. 2 JTS 16V	_	Bosch Motronic Injection MeD7.6.1 CF4/EOBD (eng.		•	•			0
159	1. 8 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)		•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)		•	•	•		0
159	1. 9 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•		0
159	1.9 MJET 8V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	2. 0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	2. 4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	•	•	•	•	•	0
159	1.8 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
159	1.9 MJET 8V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	2.2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
BRERA	3.2 V6 24V	Safety	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	1.9 JTD	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	1.9 JTD 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	2.0 TS 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	GTA 3.2 V6	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	GTA SELESPEED	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
147	SELESPEED	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	1.8 TS 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	1.9 JTD 16V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	3. 2 V6 24V	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
GT	JTS 2.0	Safety	Bosch 8 ASR ABS	•	•	•	•	•	0
159	1.8 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	2.2 JTS 16V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Body Computer Marelli 3	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Body Computer Marelli 3	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
				info.	Codes	Codes	Data	Test	
159	1. 8 16V	Safety	Steering Lock TRW 2	•	•	•			0
159	1.8 JTS TB 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1. 9 JTS 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	2.2 JTS 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
BRERA	3.2 V6 24V	Safety	Steering Lock TRW 2	•	•	•	•	•	0
159	1.8 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	2. 2 JTS 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	3. 2 V6 24V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	2. 2 JTS 16V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	2. 4 MJET 20V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	Electronic Key TRW (Teg Reader)	•	•	•	•	•	0
159	1. 8 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	1.8 JTS TB 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
159	1.9 JTS 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	1.9 MJET 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	1.9 MJET 8V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	2.0 JTD 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	2.2 JTS 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	2.4 MJET 20V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	3. 2 V6 24V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
BRERA	1.8 JTS TB 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
BRERA	2.0 JTD 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
BRERA	2.2 JTS 16V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
BRERA	2.4 MJET 20V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
BRERA	3.2 V6 24V	Safety	Tyre Pressure Control TRW 2	•	•	•	•	•	0007 0014 0005 0083 0012 0013
159	1.9 MJET 16V	3	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
159	1.9 MJET 8V	- U	Automatic Gearbox AISIN AF40-6	•	•	•	•	•	0
159 159	2. 4 MJET 20V	9	Automatic Gearbox AISIN AF40-6			•			0
BRERA	3. 2 V6 24V 2. 4 MJET 20V	_	Automatic Gearbox AISIN AF40-6 Automatic Gearbox AISIN AF40-6						0
BRERA	3. 2 V6 24V		Automatic Gearbox AISIN AF40-6						0
GIULIETTA	1. 4 TURBO 16V	_	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V		Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V		Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
MITO	1.4 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Instrumentation	Marelli/Microsoft Convergence (EP)	•	•	•	•	•	0
147	1.6 TS 16V 105CV	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	1.6 TS 16V 120CV	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	1.9 JTD	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	1.9 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	2.0 TS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	GTA 3.2 V6	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	GTA SELESPEED	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
147	SELESPEED	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.8 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.9 JTS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.9 MJET 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	1.9 MJET 8V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	2.0 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	2.2 JTS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	2.4 MJET 20V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
159	3.2 V6 24V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
BRERA	3.2 V6 24V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	1.8 TS 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	1.9 JTD 16V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	3.2 V6 24V	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
GT	JTS 2.0	Instrumentation	Marelli/Microsoft Convergence	•	•	•	•	•	0
MITO	1.3 MJET 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1.4 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0



NOTES:

● This function is supported. ▲ This fun

▲ This function is the new feature in this version.

O This function is not supported.
** This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
MITO	1.4 TURBO 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Comfort	Denso Climate Control (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Comfort	Denso Heater (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Comfort	Denso Heater (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0083 0012 0013 0006
MITO	1.4 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0083 0012 0013 0006
MITO	1.4 TURBO 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0083 0012 0013 0006
MITO	1.6 MJET 16V	Safety	TRW Tyre Pressure Control (EP)	•	•	•	•	•	0007 0005 0083 0012 0013 0006
BRERA	1.8 JTS TB 16V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
BRERA	3.2 V6 24V	Safety	Body Computer Marelli 4	•	•	•	•	•	0
159	3.2 V6 24V	Engine - Gearbox	Bosch Motronic MeD7.6.2 CF4/EOBD injection (eng. 3.2)	•	•	•	•	•	0
BRERA	3.2 V6 24V	Engine - Gearbox	Bosch Motronic MeD7.6.2 CF4/EOBD injection (eng. 3.2)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	3.2 V6 24V	Other systems	G.E. PROCOND 4 Driver's Door	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	3.2 V6 24V	Safety	WEBASTO hood/luggage compartment	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Other systems	G.E. PROCOND 4 Passenger's Door	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System	ECU	Read	Erase	Live	Active	Configuration
BRERA	2.4 MJET 20V	Other costems	G.E. PROCOND 4 Passenger's Door	info.	Codes	Codes	Data	Test	0
BRERA	3. 2 V6 24V		G. E. PROCOND 4 Passenger's Door						0
159	1. 8 16V	Other systems	Siemens VDO CF4/EOBD injection (eng. 1.8)			•			0
147	1. 6 TS 16V 105CV		Marelli/Microsoft C3 Convergence			•			0
147	1. 6 TS 16V 109CV		Marelli/Microsoft C3 Convergence						0
147						•			-
	1.9 JTD		Marelli/Microsoft C3 Convergence	•		_			0
147	1.9 JTD 16V		Marelli/Microsoft C3 Convergence			•			0
147	2. 0 TS 16V		Marelli/Microsoft C3 Convergence		•	•	•		0
147	GTA 3.2 V6		Marelli/Microsoft C3 Convergence	•	•	•	•		0
147	GTA SELESPEED	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
147	SELESPEED		Marelli/Microsoft C3 Convergence	•	•	•	•		0
159	1.8 16V		Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.9 JTS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.9 MJET 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	1.9 MJET 8V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	2.0 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	2.2 JTS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	2.4 MJET 20V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
159	3.2 V6 24V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	2.4 MJET 20V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
BRERA	3.2 V6 24V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
GT	1.8 TS 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
GT	1.9 JTD 16V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
GT	3. 2 V6 24V	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
GT	JTS 2.0	Instrumentation	Marelli/Microsoft C3 Convergence	•	•	•	•	•	0
MITO	1.3 MJET 16V		Marelli/Microsoft C3 (EP) Convergence	•	•	•	•	•	0
MITO	1.4 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
MITO	1.4 TURBO 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	•	•	•	•	•	0
MITO	1.6 MJET 16V	Instrumentation	Marelli/Microsoft C3 (EP) Convergence	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Safety	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
BRERA	3.2 V6 24V	Safety	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	•	•	•	•	•	0
159	2.2 JTS 16V	Engine - Gearbox	Marelli SELESPEED CFC300 Automatic Gearbox	•	•	•	•	•	0014 0117 0163
BRERA	2.2 JTS 16V	Engine - Gearbox	Marelli SELESPEED CFC300 Automatic Gearbox	•	•	•	•	•	0014 0117 0163
GIULIETTA	1.4 TURBO 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0
MITO	1.4 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Engine - Gearbox	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP eng. 1.4)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
GIULIETTA	1.6 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
GIULIETTA	1.8 JTS TB 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
GIULIETTA	2.0 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.3 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.4 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.4 TURBO 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.6 MJET 16V	Comfort	VALEO Parking Control unit (EP) 2	•	•	•	•	0	0
MITO	1.3 MJET 16V	Engine - Gearbox	Marelli 6F3 EOBD CAN Diesel Injection (EP eng. 1.3 JTD)	•	•	•	•	•	0
159	2.0 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 eng.)	•	•	•	•	•	0029 0057 0058 0059 0060 0030 0042 0014 0022 0079 0053 0056 0003 0020 0051



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
BRERA	2.0 JTD 16V	Engine - Gearbox	Bosch Diesel Injection EDC16C39 CF5/EOBD (1.6/1.9/2.0 eng.)	•	•	•	•	•	0029 0057 0058 0059 0060 0030 0042 0014 0022 0079 0053 0056 0003 0020 0051
GIULIETTA (191)	1.4 TURBO 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
GIULIETTA (191)	1.6 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
GIULIETTA (191)	1.8 JTS TB 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
GIULIETTA (191)	2.0 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
MITO	1.3 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
MITO	1.4 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
MITO	1.4 TURBO 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
MITO	1.6 MJET 16V	Instrumentation	Siemens 3 instrument panel	•	•	•	•	•	0027 0069 0063 0065 0064 0034
MITO	1.3 MJET 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.4 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	Delphi (EP) 3 Body computer	•	•	•	•	•	0
MITO	1.3 MJET 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	50
MITO	1.4 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	50
MITO	1.4 TURBO 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	50
MITO	1.6 MJET 16V	Safety	DELPHI (EP) 3 Electric Steering	•	•	•	•	0	50
GIULIETTA (191)	1.6 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	•	•	•	•	•	0
GIULIETTA (191)	2.0 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Engine - Gearbox	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP 1.6/2.0 eng.)	•	•	•	•	•	0



NOTES:

This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
MITO	1.3 MJET 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0
MITO	1.4 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	Bosch ABS 8 ESP (EP) 2	•	•	•	•	•	0
MITO	1.3 MJET 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
MITO	1.4 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	CONTINENTAL Airbag (EP-Proxy) 2	•	•	•	•	•	0
159	1.8 JTS TB 16V	Engine - Gearbox	Bosch Injection Motronic MeD17.3.1 CF5/EOBD (eng. 1.8)	•	•	•	•	•	0101 0014
BRERA	1.8 JTS TB 16V	Engine - Gearbox	Bosch Injection Motronic MeD17.3.1 CF5/EOBD (eng. 1.8)	•	•	•	•	•	0101 0014
MITO	1.4 TURBO 16V	Comfort	Magneti Marelli suspension (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.4 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Comfort	Marelli Radio Navigator (EP)	•	•	•	•	•	0
159	1.8 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.8 JTS TB 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.9 JTS 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.9 MJET 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	1.9 MJET 8V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	2.0 JTD 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	2.2 JTS 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	2.4 MJET 20V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
159	3.2 V6 24V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	1.8 JTS TB 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	2.0 JTD 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	2.2 JTS 16V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

Model	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
BRERA	2.4 MJET 20V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
BRERA	3. 2 V6 24V	Comfort	Marelli Radio Navigator	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Engine - Gearbox	Injection Landi Renzo LCO2 Gas	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Engine - Gearbox	Magneti Marelli Injection IAW 8GMF CF5/EOBD (EP eng.	•	•	•	•	•	0
MITO	1.4 16V	Engine - Gearbox	Magneti Marelli Injection IAW 8GMF CF5/EOBD (EP eng.	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Engine - Gearbox	Magneti Marelli Injection IAW 8GMF CF5/EOBD (EP eng.	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.4 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Instrumentation	Lauberhorn Convergence (EP)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Engine - Gearbox	Marelli Diesel Injection 8DF CF5/EOBD (EP eng. 1.3 JTD)	•	•	•	•	•	0
MITO	1.3 MJET 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
MITO	1.4 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
MITO	1.6 MJET 16V	Safety	CONTINENTAL Airbag (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Safety	Continental MK60EC ABS (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Safety	Bosch Air bag (EP)	•	•	•	•	•	0
MITO	1.4 TURBO 16V		Marelli DDCT CFC8TDF Automatic Gearbox (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Engine - Gearbox	Bosch Motronic Injection MeD17.3.1 CF5/EOBD (EP eng.	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0



NOTES:

• This function is supported.

▲ This function is the new feature in this version.

O This function is not supported.

* This function may be supported, which depends on the actual condition of the vehicle.

ns for spe	ectar runction pre-	ase refer to the	special function table.						
Mode1	Version	Group	System	ECU info.	Read Codes	Erase Codes	Live Data	Active Test	Configuration
GIULIETTA	1.8 JTS TB 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Comfort	Marelli climate control Two-zone (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Comfort	Marelli Manual Climate control (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Safety	Marelli 10 Body Computer	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Comfort	Lear driver's seat (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Comfort	Lear passenger seat (EP)	•	•	•	•	•	0
GIULIETTA	1.4 TURBO 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
GIULIETTA	1.6 MJET 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
GIULIETTA	1.8 JTS TB 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
GIULIETTA	2.0 MJET 16V	Other systems	Automotive Lighting discharge headlights (EP)	•	•	•	•	•	0
159	1.8 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.8 JTS TB 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.9 JTS 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.9 MJET 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	1.9 MJET 8V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	2.0 JTD 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	2.2 JTS 16V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	2.4 MJET 20V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0
159	3.2 V6 24V	Safety	Convergence Lauberhorn C1	•	•	•	•	•	0

	-Autel Special_Function										
index	Specil Function Name	index	Specil Function Name								
0001	Air conditioner Learn	0123	System Configuration Read								
0002	Air flow meter replacement (only for version	0124	System Configuration Write								
0003	with Lambda sensor) Air flow meter sensor replacement	0125	Reset self-adapt. param. and idle act.								
0003	Air flow meter sensor replacement Air flow sensor replacement	0126	Electronic Key control unit programming								
0004	Alarm deletion	0126									
0006	Alarm state check	0127	Engine Control + Electronic Key control units programming Clutch bleed								
0007	Antenna replacement	0128	Accumulator depressurisation								
0008	Automatic Configuration Read	0130	Clutch self-calibration enable								
0009	Automatic Configuration Write	0131	End of line / service self-calibration								
0010	Brake bleed	0132	New actuators								
0010	Cam edges zeroing (VVT)	0133	Flap actuators learning test								
0012	Control unit activation	0134	Oil Counter Write								
0013	Control unit deactivation	0135	Engagement lever pin securing screw diagnosis								
0014	Control unit replacement	0136	Selection lever return diagnosis								
0015	Cruise Control Learn	0137	Memory mode write								
0016	Cyl. 1 injector classification	0138	Control Unit Unlock								
0017	Cyl. 2 injector classification	0139	Calculation of clutch degradation index								
0018	Cyl. 3 injector classification	0140	Test limit speed disable								
0019	Cyl. 4 injector classification	0141	Test limit speed restore								
0020	Differential pressure sensor replacement (only for version with DPF)	0142	VIN Code Configuration								
0021	EGR valve learn	0143	Personal data deletion								
0022	EGR valve replacement	0144	Cyl. 5 injector classification								
0023	Engine - Control Unit Group Replacement	0145	Injector classification (5 cyl. bank)								
0024	Engine type configuration	0146	Deletion of statistical data relating to errors								
0025	FAP Replacement	0147	CITY switch replacement								
0026	Fuel supply system	0148	SPORT switch replacement								
0027	Headlamp pos. correct.	0149	Activation/Deactivation 'Auxiliary video input' procedure								
0028	Injector classification (4 cyl. bank)	0150	Cruise control learn zeroing								
0029	Injector codes read	0151	Zeroing fan mode learn								
0030	Injector replacement (per bank)	0152	Borg Warner sol. valves compatibility								
0031	Inputs status	0153	Self-adapting parameters zeroing (air)								
0032	Inspection service value	0154	Self-adapting parameters zeroing (knock)								
0033	Instrument panel lighting	0155	Gearbox Lever Position Learn								
0034	Instrument panel replacement	0156	Deletion stored buttons								
0035	Knock counter reset	0157	Audio System Test								
0036	Lambda sensor check	0158	Convergence System Restart								
0037	Lambda sensor replacement (only for version with Lambda sensor)	0159	CAN Network Activation								
0038	LED colours configuration	0160	Deletion of air temperature sensor data								
0039	Longit. acc. sensor calibration	0161	High pressure pump replacement								
0040	Looks for faulty wheel transmitter	0162	Additional diesel circuit filling								
0041	Manual System Configuration	0163	Gearbox replacement								
0042	Odometer write	0164	Gearbox oil accumulator replacement								
0043	Oil change (only for version with DPF)	0165	Pilot injection learn								
0044	Oil change servicing information delete	0166	ECO switch replacement								
0045	Overboost counter reset	0167	End of line self-calibration								
0046	Particulate filter regeneration (only for version with DPF)	0168	Forced trim correction								
0047	Particulate filter replacement (only for version with DPF)	0169	Vehicle geometry height setting								
048	Phase sensor learn zeroing	0170	Pneumatic circuit filling								
049	Phonic wheel learn reset	0171	Pneumatic circuit unloading								
050	Phonic wheel replacement	0172	Longitudinal acceleration signal learn								
0051	Position sensor calibration	0173	JukeBox data deletion								
0052	Pre-catalyser replacement (only for version with	0174	ECO/SPORT switch replacement								
0053	Rail pressure sensor and injector/s replacement	0175	'UP Function' switch replacement								

	Special_Function										
index	Specil Function Name	index	Specil Function Name								
0054	Rail pressure sensor replacement	0176	Services Interval KM write (only 1.6 MJET 16V 105 hp eng.								
)055	Replacement injector cyl. 5	0177	Automatic gearbox replacement								
0056	Replacement injectors (4 cyl. bank)	0178	Automatic gearbox and Control unit replacement								
0057	Replacement Lambda sensor	0179	Automatic gearbox oil replacement								
0058	Replacement of injector cyl. 1	0180	Services Interval KM write (only for 1.4 TURBO 16v 120/15 bhp eng.)								
0059	Replacement of injector cyl. 2	0181	Static test								
0060	Replacement of injector cyl. 3	0182	C.P.H control unit programming								
0061	Replacement of injector cyl. 4	0183	C.P.H. control unit and engine control unit programming								
0062	Replacement of particulate filter with built-in pre-catalyzer (only for versions with DPF)	0184	Remote control programming								
0063	Replacment of control unit and injector/s	0185	Key programming								
0064	Reset odometer	0186	New vehicle preparation								
0065	Seat belts alarm Enable	0187	Reset distance till next servicing								
0066	Seat belts alarm exclusion	0188	FAP Temperature Probe presence configuration								
0067	Secondary wheel identification deletion	0189	Replacement of particulate filter and interventions on diesel additive circuit.								
0068	Self-learnt functions reset	0190	Replacement of the additive, or the pump, or the tubes.								
0069	Services Interval KM message	0191	System configuration via Examiner Web								
070	Servicing information delete	0192	Performance limiting deactivation								
071	Servo Mechanism Group Replacement	0193	Volumetric sensors automatic diagnosis								
072	Speed limit setting	0194	Neutral signal learn								
073	Startup with Code Card	0195	Hydraulic Kit replacement								
074	Steering angle calibration	0196	Sensors module replacement								
075	Steering angle reset	0197	Selection and/or engagement clutch electrovalve								
076	System configuration	0198	Resetting distance travelled with Water Temp. w. lamp ON								
077	Throttle learn storage	0199	Resetting distance travelled with Water in diesel w. lamp								
078	Tow hook presence disable	0200	Accelerometer calibration								
079	Tow hook presence enable	0201	Control unit Replacement / Reprogramming								
080	Variable geometry turbo replacement	0202	Motorised throttle replacement								
0081	Vehicle configuration deletion	0203	Upstream lambda sensor replacement								
0082	Vehicle type learn reset	0204	MultiAir Rolling finger replacement								
0083	Wheel identification check	0205	Timing sensor and/or cam replacement								
0084	Wheel transmitters learning	0206	Rpm sensor and/or distribution belt replacement								
0085	Zeroing of self-adaption parameters	0207	Oil temperature sensor replacement								
0086	Engine control unit programming	0208	UniAir module replacement								
0087	System calibration	0209	Supercharging system components replacement								
8800	Total additive quantity	0210	Downstream lambda sensor and/or catalyzer and/or Injector replacement								
0089	Part. Filter regeneration	0211	Differential pressure sensor replacement								
0090	Customer mode	0212	Particulate filter with integrated pre-cat replacement								
0091	Mounting check	0213	Particulate filter regeneration								
0092	Tyre Pressure check	0214	Mechanical waste-gate valve replacement								
0093	Control Unit Replacement	0215	Replacement of variable geometry turbo and/or turbo positionsor								
0094	Additive type configuration	0216	Lateral and longitud. acceleration sensor calibration								
0095	RH distribution flap learn	0217	Pressure sensor calibration								
096	LH distribution flap learn	0218	Load valves calibration								
097	LH mixing flap learn	0219	Pilot valves calibration								
098	RH mixing flap learn	0220	Longitudinal acceleration sensor replacement								
099	United Kingdom (Thatcham std)	0221	Even no. gear clutch pressure sensor replacement								
100	Date daylight time changed	0222	Odd no. gear clutch position sensor replacement								
101	Fuel level regulat.	0223	Odd and/or even gear clutch replacement								
102	0il change	0224	Electropump drive unit replacement								
103	Self-adaptive parameters	0225	Gearbox button panel replacement								
104	Phonic wheel learn	0226	Replacement injectors								
105	Injector classification	0227	Additive quantity volume								
	Recognition of speed sensor type	0228	Air flow meter replacement								

Autel Special_Function			
0107	Actuator tests	0229	Air metering unit replacement
0108	Self-adaptation Parameter erasure	0230	Supercharg. air cooling SV replacement
0109	Sensor vibration time too long	0231	Replacement of Lambda sensor
0110	Dist. To Next Service Zeroing (Coupon)	0232	Homologation number
0111	Maintenance Services Config.	0233	Speed limit
0112	Call buttons configuration	0234	Levers on steering wheel learn
0113	Clutch replacement	0235	Gearbox and hydraulic KIT replacement
0114	KIT/Gearbox replacement	0236	Parking manoeuvre status
0115	Electropump replacement	0237	Phonic wheel and/or phase sensor and/or rev sensor
0116	Statistical data deletion	0238	Replacement of lambda sensor and/or spark plugs and/or injectors
0117	Tunnel lever replacement	0239	Replacement of pressure/temperature sensor in methane rail
0118	Steering wheel levers replacement	0240	Pre-catalyzer replacement
0119	KIT/Pump replacement	0241	Particulate filter replacement
0120	Pump relay replacement	0242	Alcohol fuel setting
0121	AUTO switch replacement	0243	Petrol fuel setting
0122	Key storage	0244	Air/Fuel learn setting